

6686

LEGOLAND®

 


100321







1

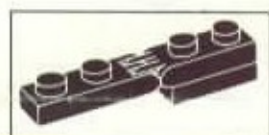


2

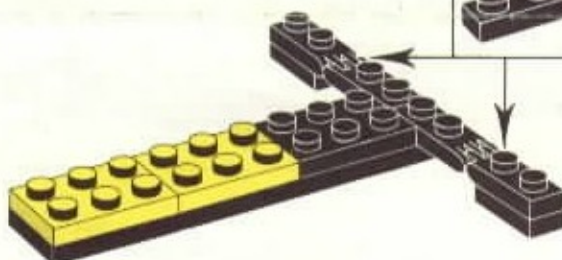 



3

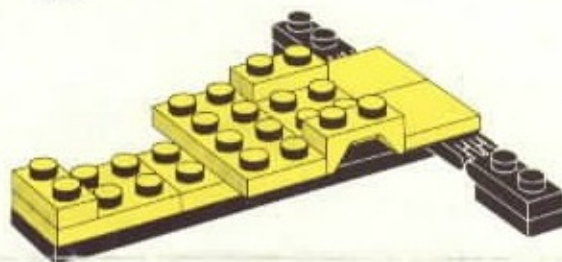 


4

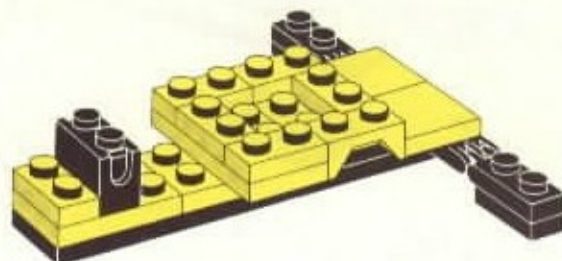 

5

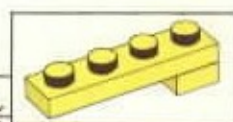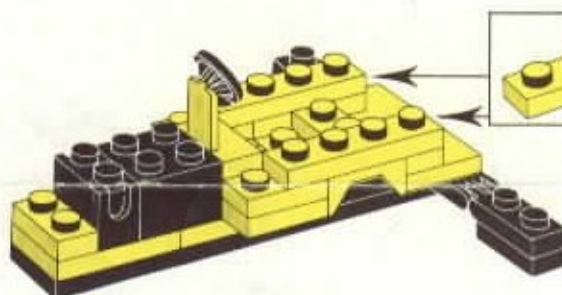  

6

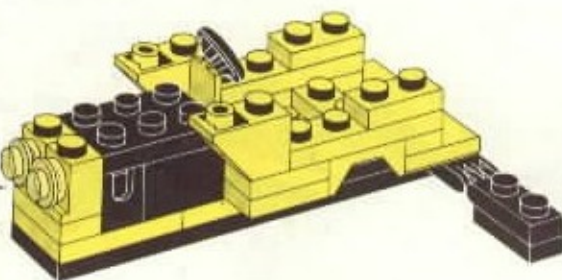 

1



3



 
2




4




7

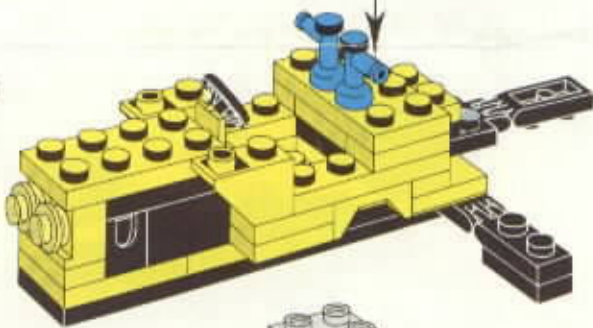



8

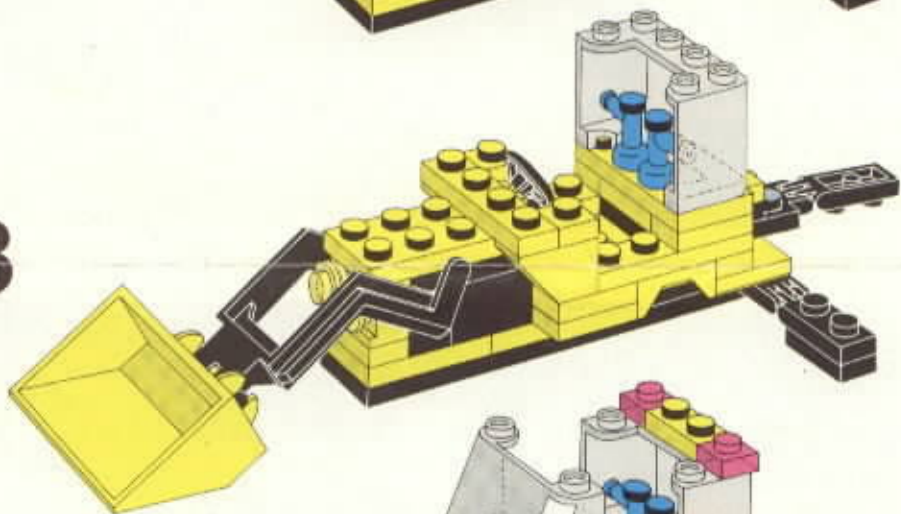 


9

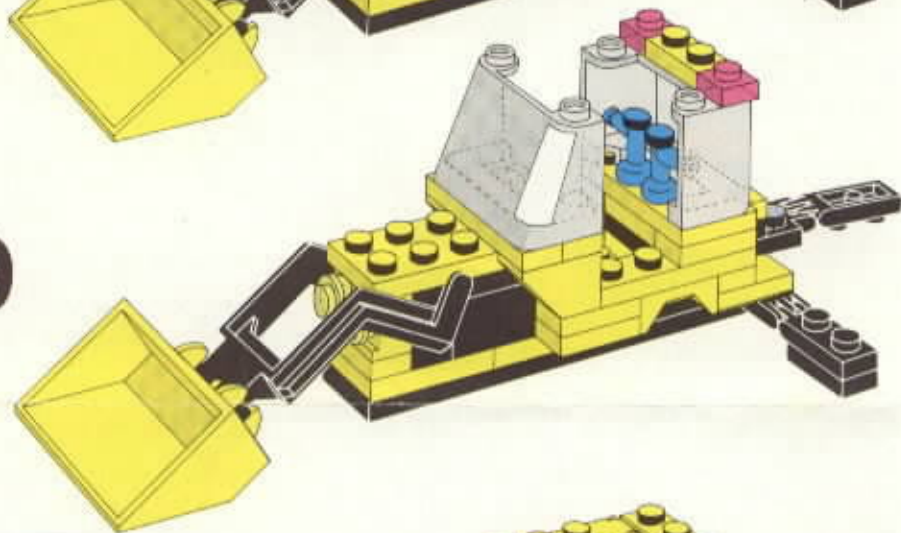 

10

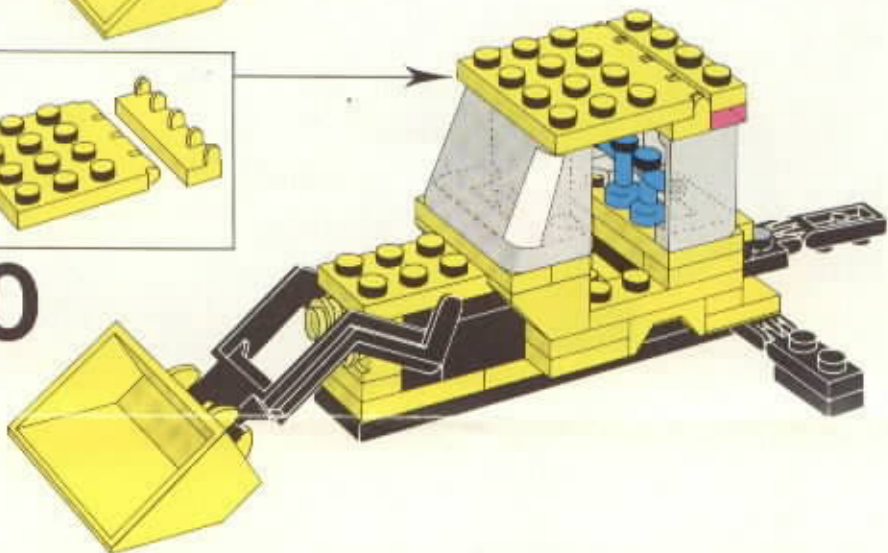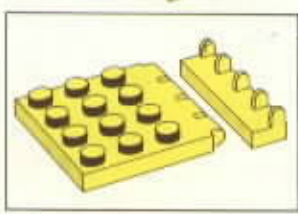  

10

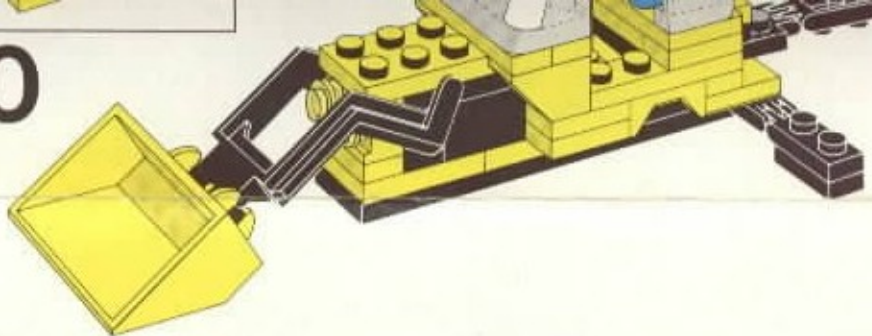 


1




2



 
3

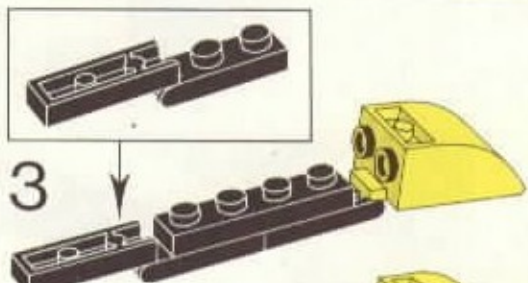

4

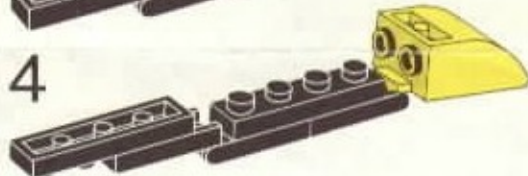 

11

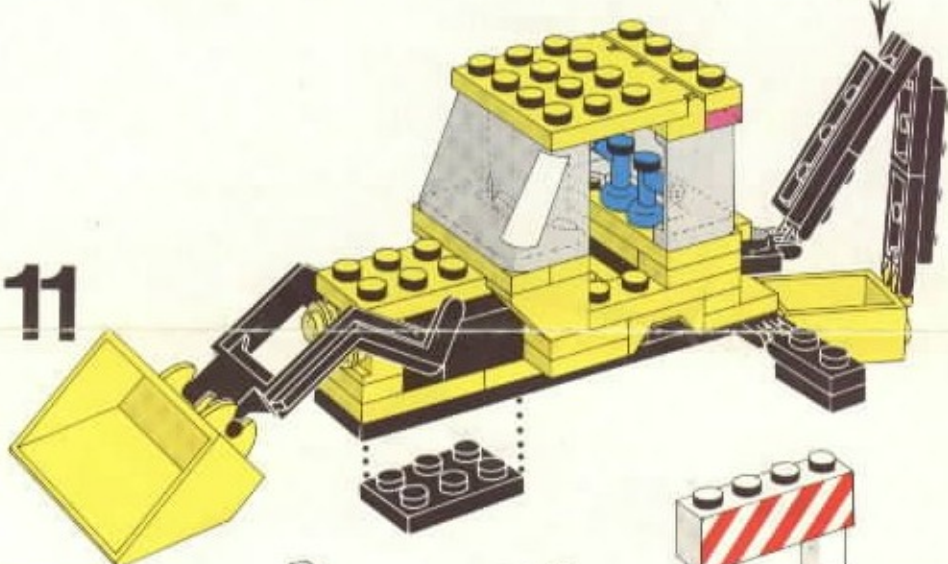 

12

