 
 




41060



[LEGO.com / disneyprincess](http://LEGO.com/disneyprincess)

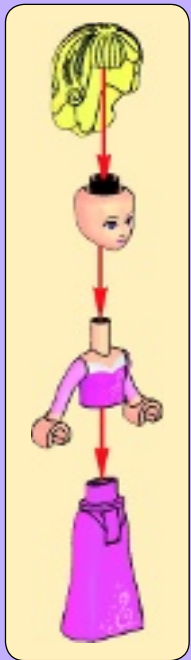 


2







1

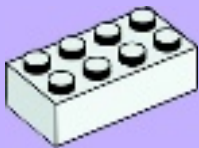


2

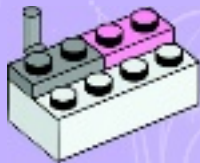 


3

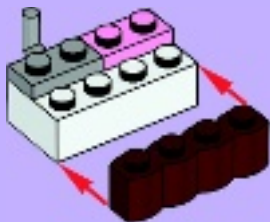 


4

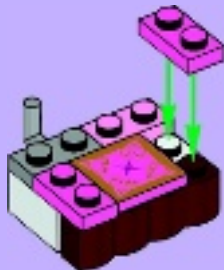 

5

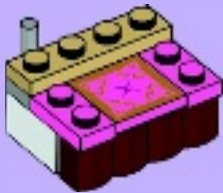 


6

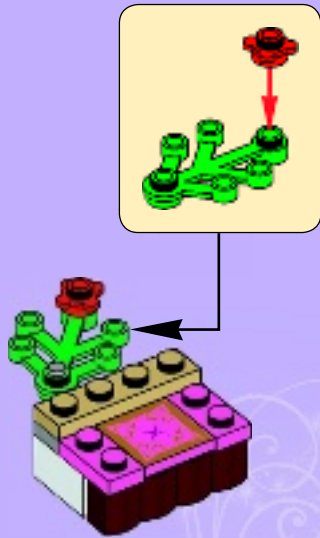 


1



 2

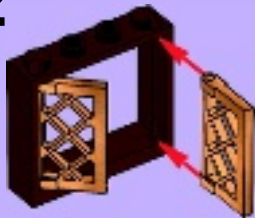

3

 

7



8



9



10



11

 




1




2

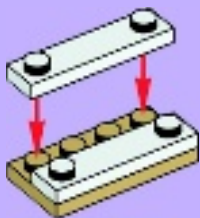


3



  4

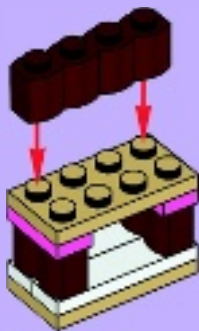

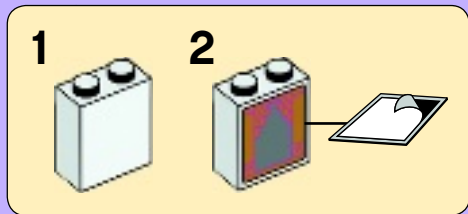

5



6



 
7



8



9

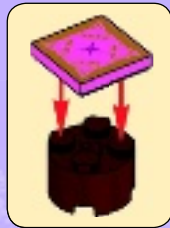




1



2



 3



4



5

 


6







1

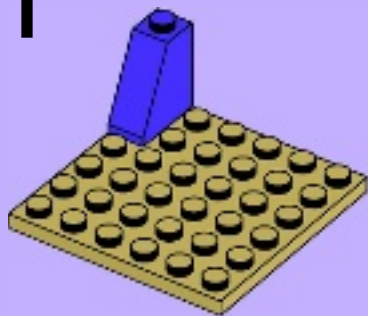

2

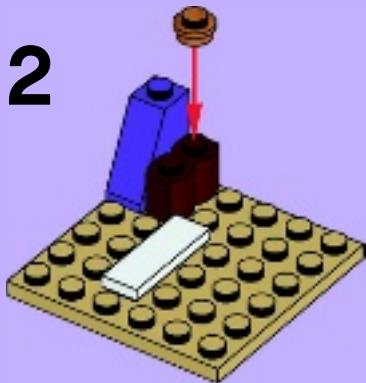 


3

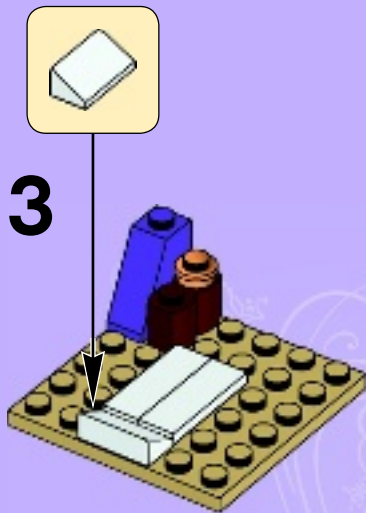 





1


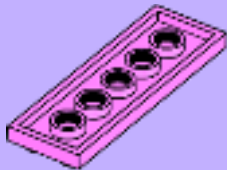 


2

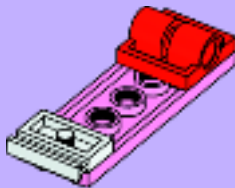 

 

3

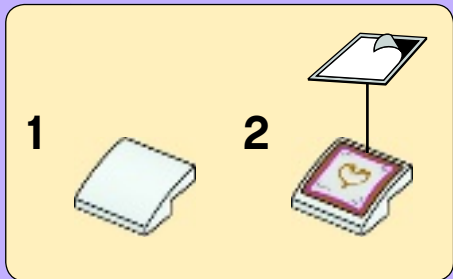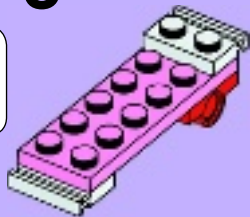  

1



2



4





5



6



 
4




5




8

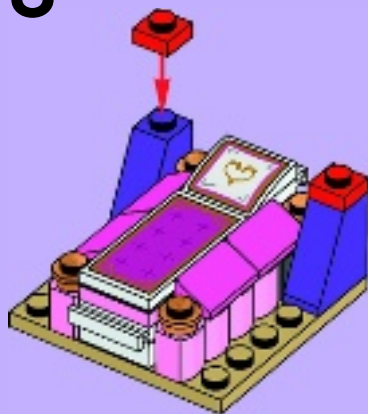


9

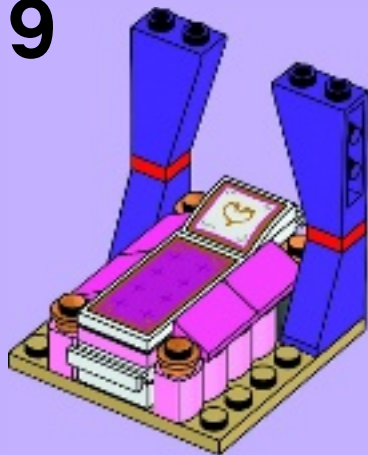 


10

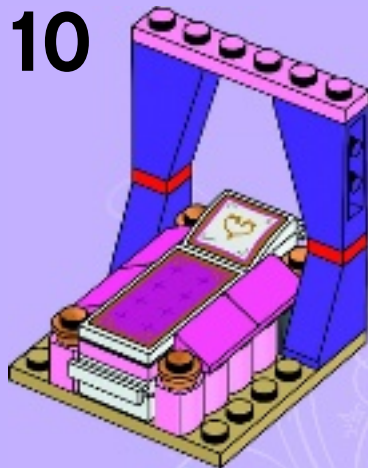 


11

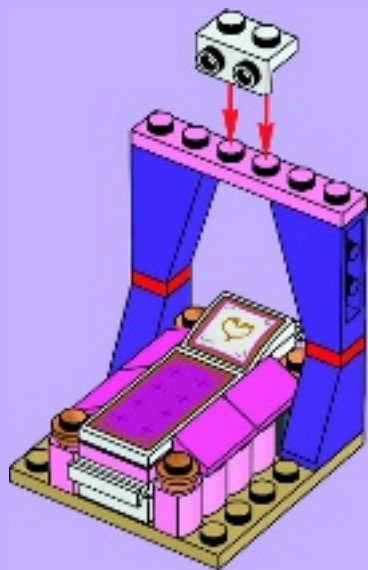 


12

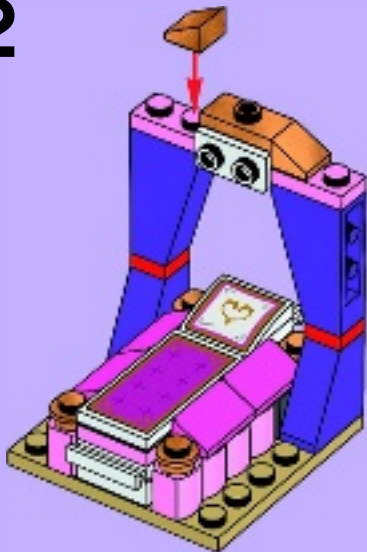 

13

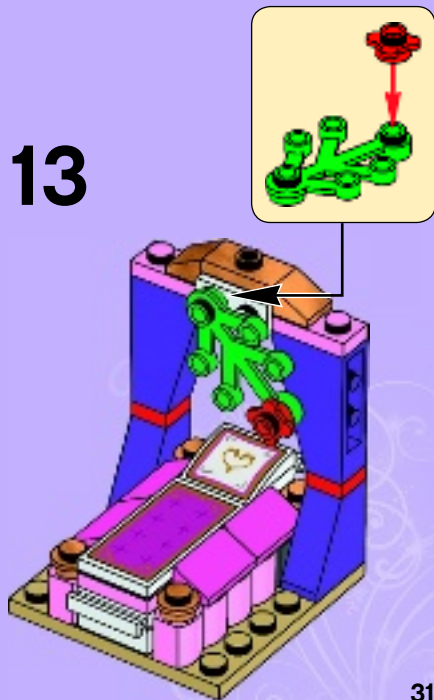 

14

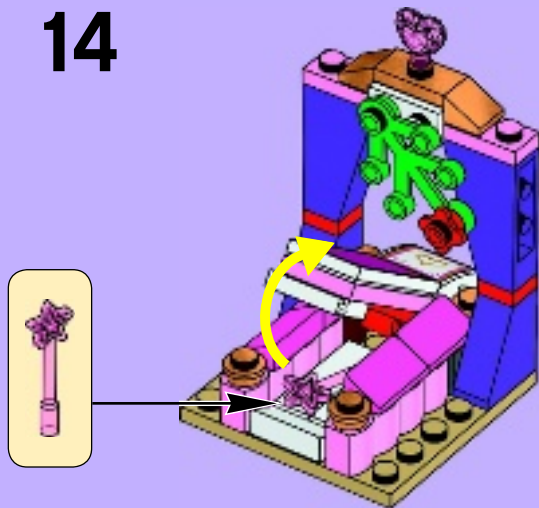 





41062

Disney FROZEN

41055

41054

41060

41061

41063



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346