



CITY

60126



1



2

 
 


3



4



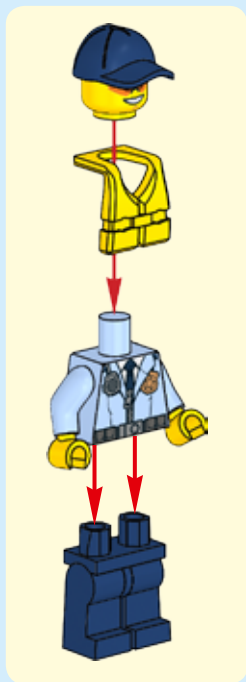


1



 
2





1x


 
1

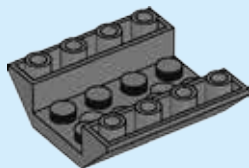



1x

  2

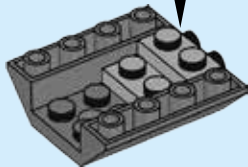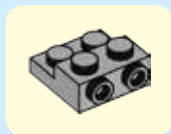


6



1x

 
3

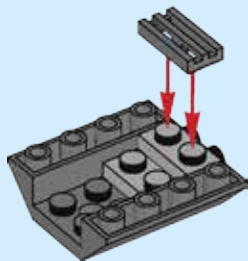



2x

 4

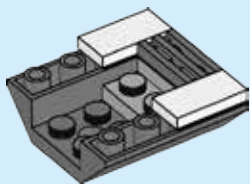

8



1x



 
1x



1x

5


1



2



 
3

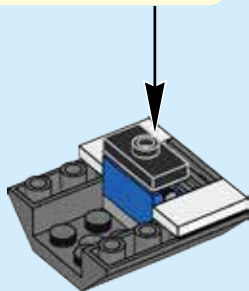




1x

  
6

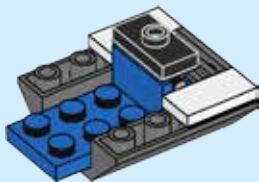



1x

 
7

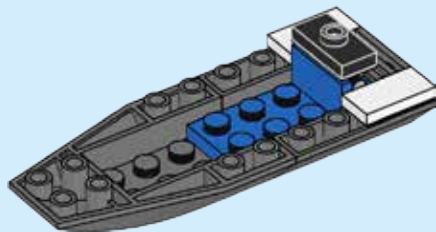



1x

 
8

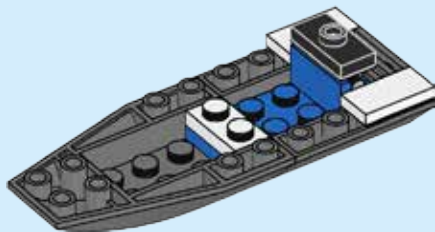



1x

 
9

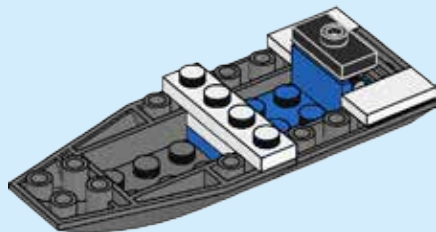



1x

 
10

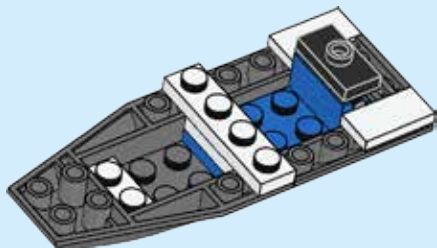



1x

 
11

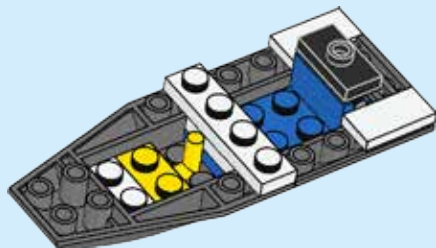



1x

 
12

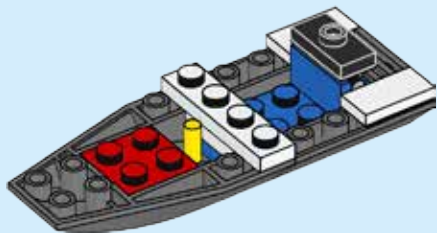



2x

 13

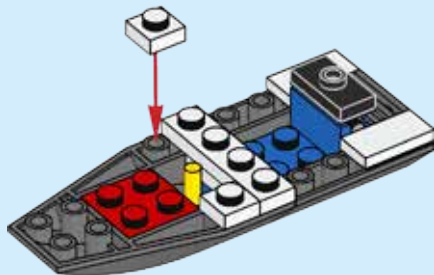




1x



2x

 
14

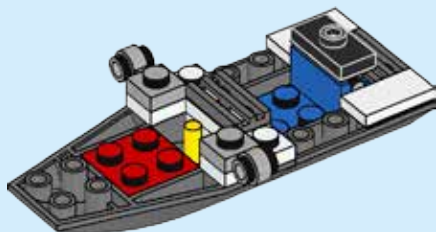



2x

 15

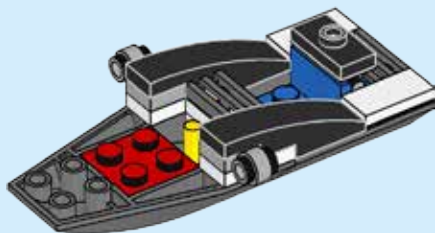




1x



1x

 16

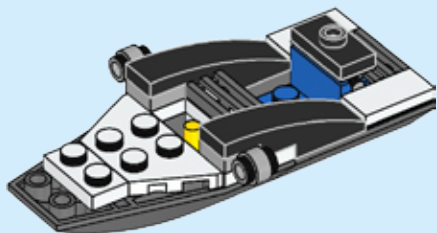





2x



1x

  
17

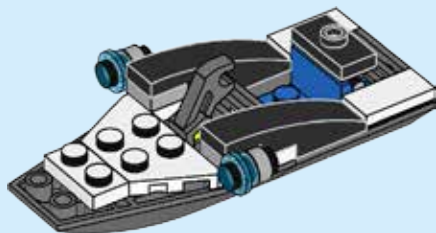



1x

 
18

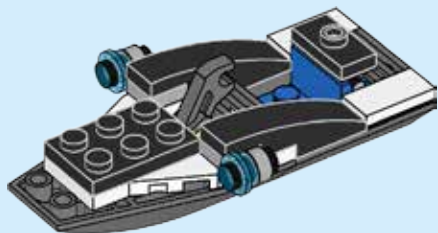



1x

 19

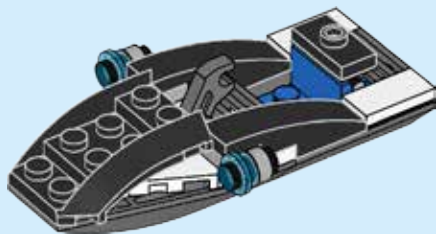




1x



1x

 20

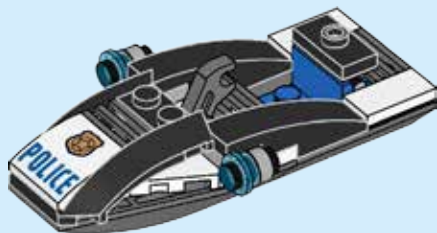





1x





1x

  
21

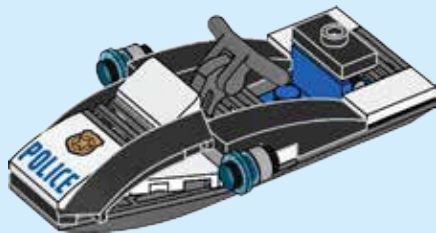



22

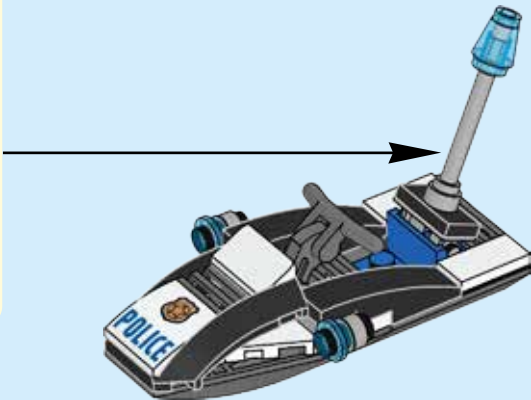  

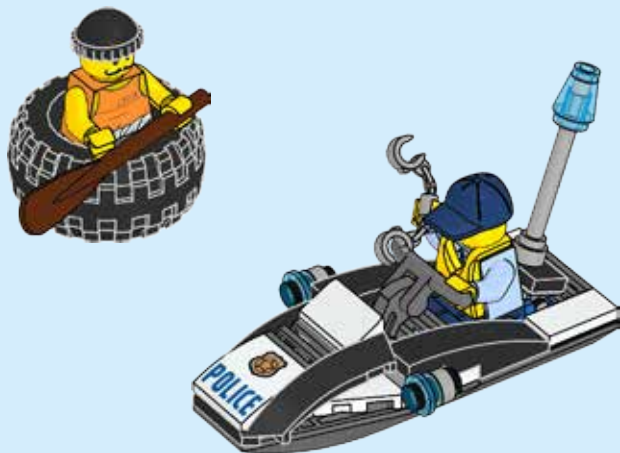 



CITY



60076



60074



60073



60072

LEGO.COM/CITY



CITY



60090



60091



60092



60093



60095

LEGO.COM/CITY



CITY



60079



60080



60078



60077

LEGO.COM/CITY



1x
4654577



1x
4211473



1x
6012812



3x
4210631



1x
4261908



1x
4658974



1x
4636417



1x
3021226



1x
4567331



2x
3005743



1x
6056241



1x
4162916



1x
4609635



2x
4632575



1x
4211470



1x
4641048



1x
6057836



1x
6132814



1x
4157108



1x
6092585



2x
6037746



1x
4506553



1x
4525236



1x
302123



1x
4652361



1x
4648281



1x
4611704



1x
6132687



1x
6132740



1x
4249506



1x
371001



1x
302221



1x
393723



2x
302401



1x
4547489



1x
6132679



2x
306901



3x
302301



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555



: 1-800-422-5346