



40120



1



2



3



 
4









1

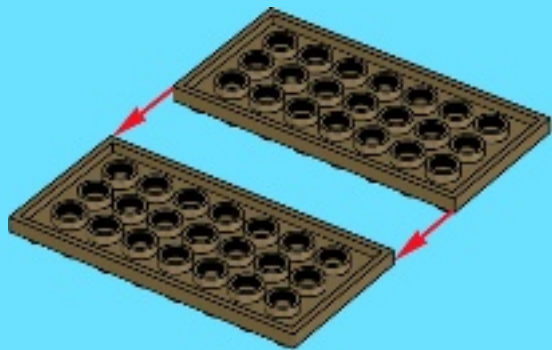


4


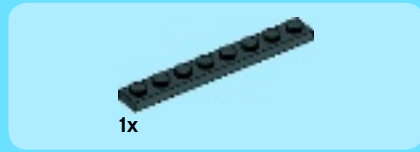 


2

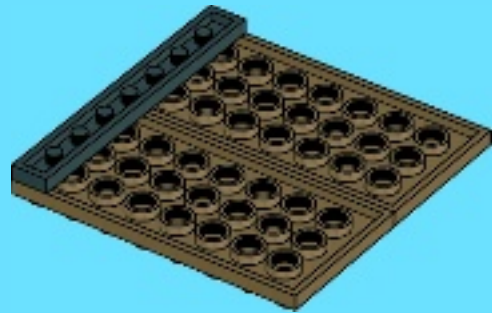 

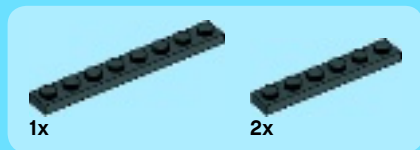 

3

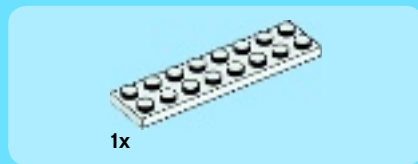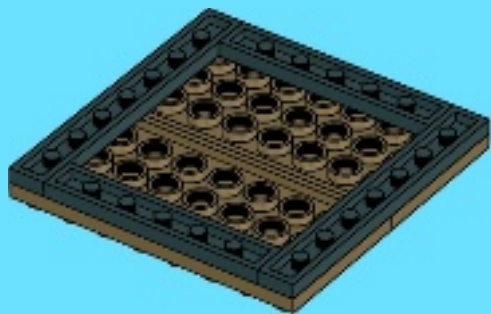  


4





4x

 5

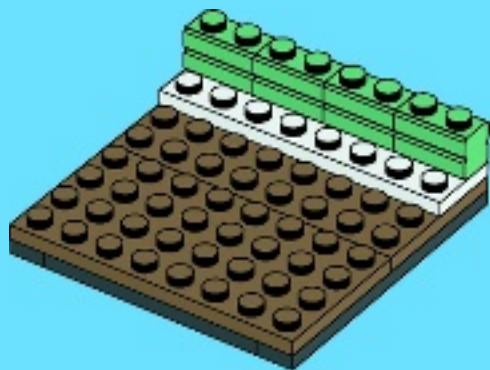


6



4x

 6

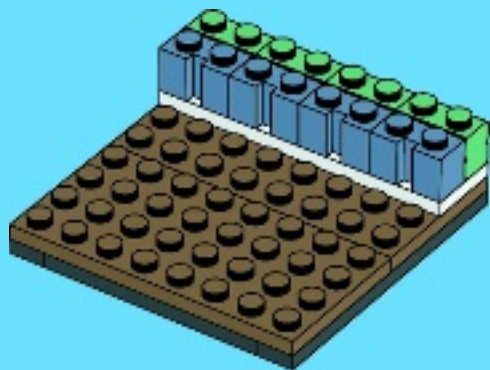




2x




3x

 7

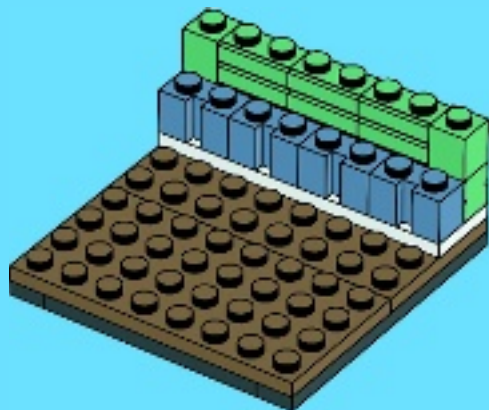

4x

 8

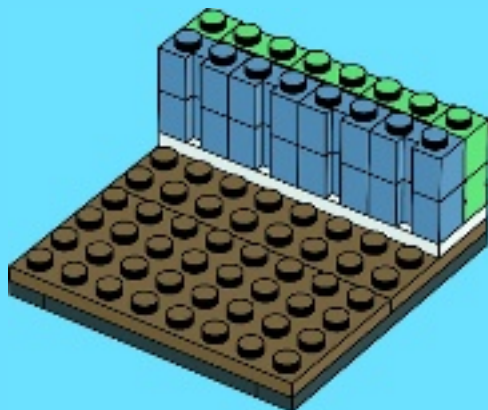




1x



2x

 9

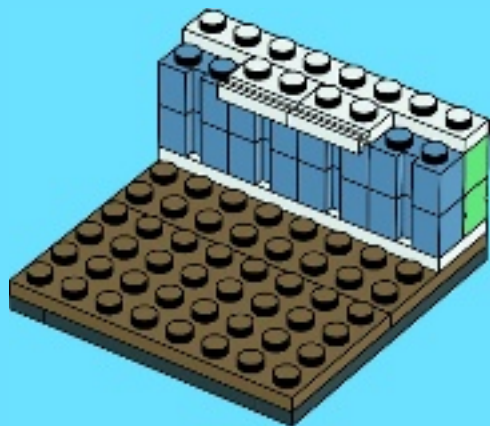


2x





2x

 10



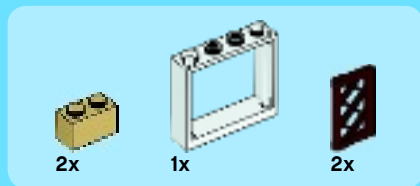

11

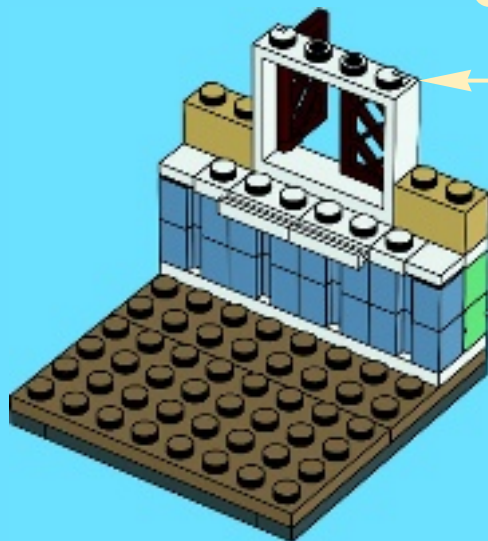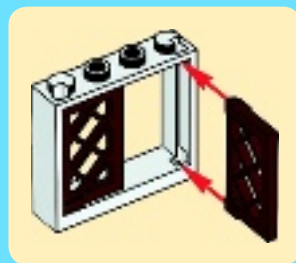  




2x



1x

 12

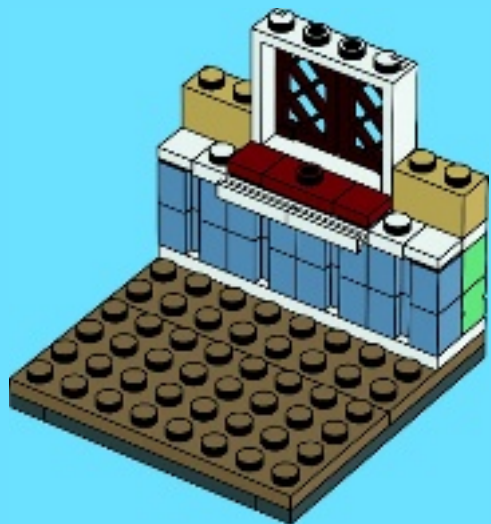

10



2x



4x

13

 
1



2



2x

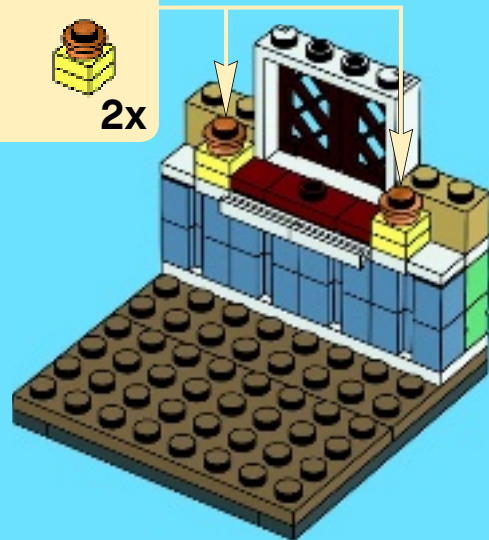



2x

14



2x



2x

15





1x

16



2x

17





1x



1x



 
3x

18

1



2

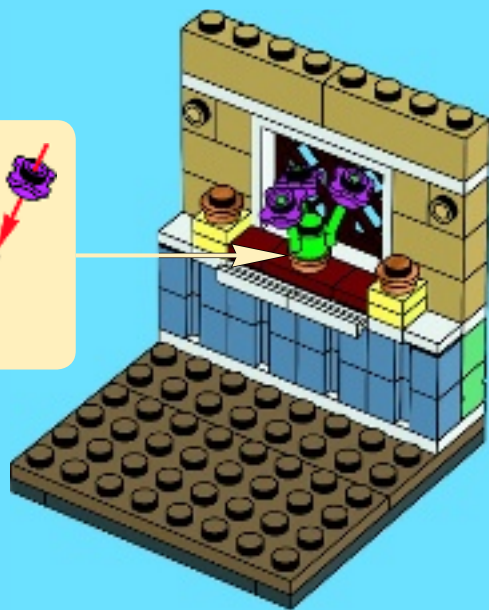




2x



2x

 19

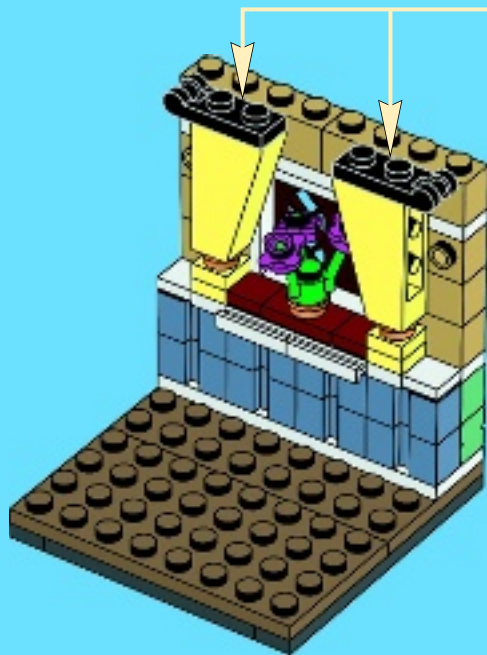

2x



 
1x



1x

20

1



2

 




2x

21



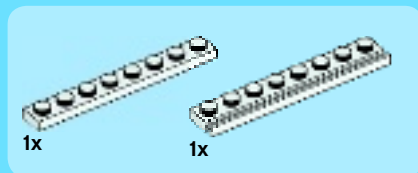

22





 
 
2x

23





24

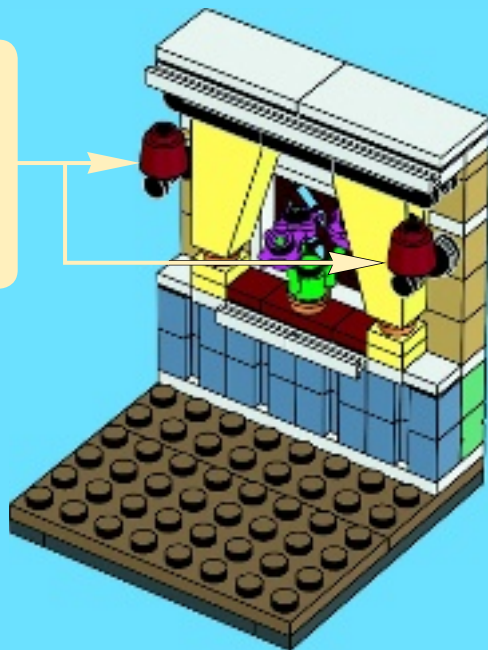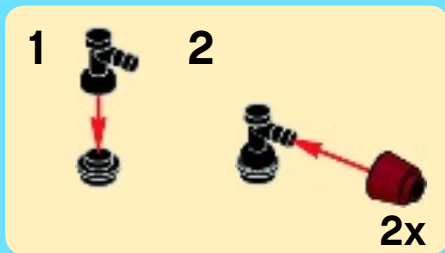



8x

25





2x

26





27



2



 
3




4





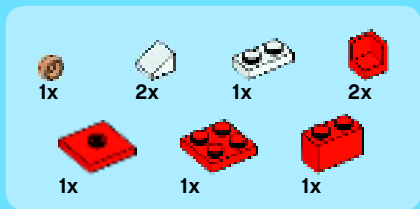

28

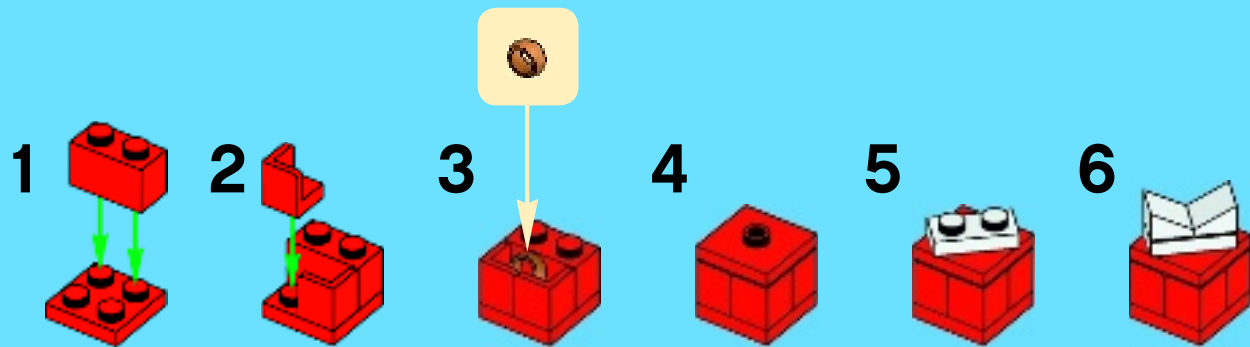 





 2x 4504369	 1x 302301	 2x 459926	 1x 4626934	 1x 374128	 2x 6060795	 1x 6064784	 1x 4526110
 2x 302401	 2x 6051511	 2x 614126	 1x 300421	 2x 4184851	 1x 6058337	 1x 4651443	 1x 4261572
 2x 307001	 2x 4249563	 8x 4529236	 1x 4581308	 2x 4521948	 3x 4523159	 1x 6024067	 1x 6022401
 1x 4530590	 2x 4113915	 1x 302326	 1x 302221	 7x 6075617	 1x 6009771	 3x 6078932	 1x 4586410
 2x 4560178	 2x 4579260	 2x 4515368	 2x 4190219	 8x 4620991	 2x 6022081	 1x 4586410	 1x 4162916
 3x 346001	 2x 4114077	 2x 4211056	 2x 4549992	 2x 6084571	 4x 6058014		
 1x 4501853	 4x 4109995	 2x 4210998	 2x 4550169	 2x 6084571			
 1x 303401	 2x 4113916	 2x 6006524	 1x 6092597	 2x 4211206			
	 1x 4114309		 1x 4631233				



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346

