



Mixels

 
41528

NIKSPUT




 LEGO.com

1

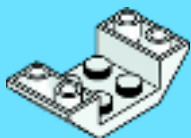

2

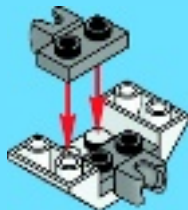 

3



4



 
5




1



2



3

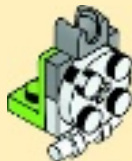 


6



7




 8

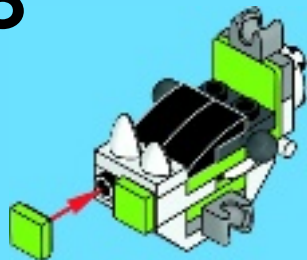




1

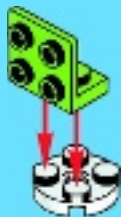 

2

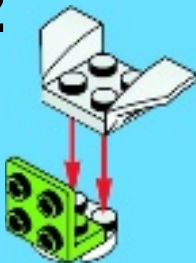 

3



1



2



3



2x

 
4



5




6

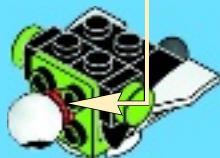

7



 8

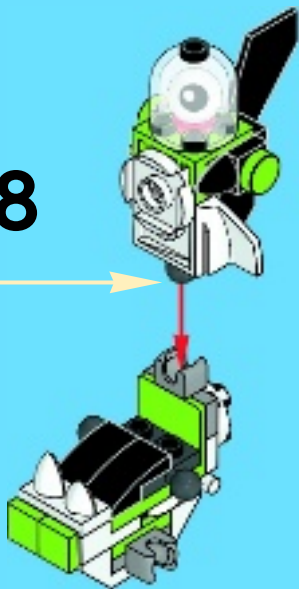




1



 2

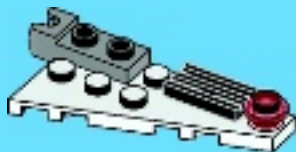


3




4



 5

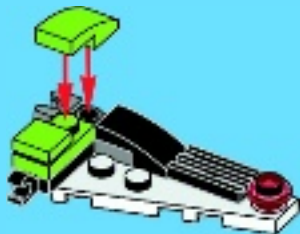

9

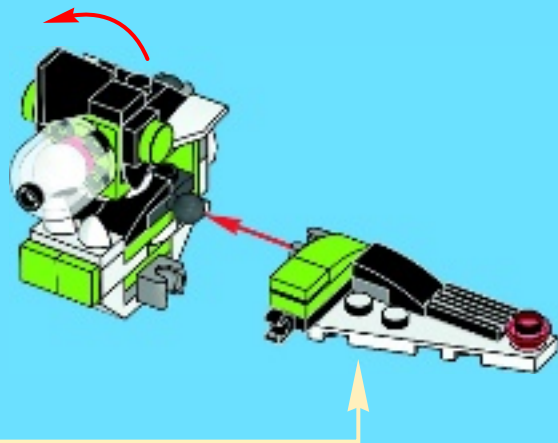 




1



 2

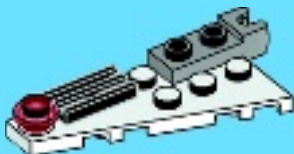


3




4



 5

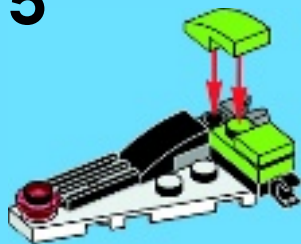


10

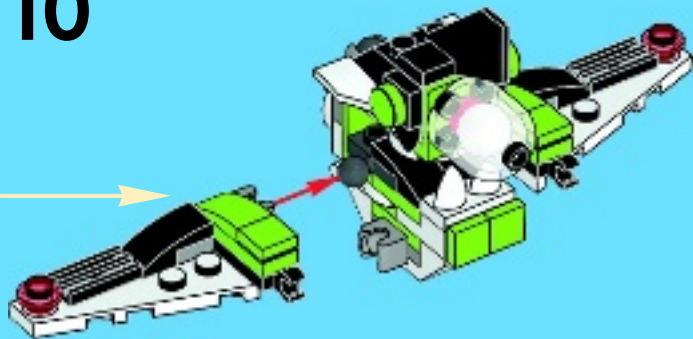 



1

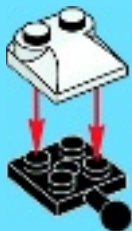 

2



3

 


4






2x

11

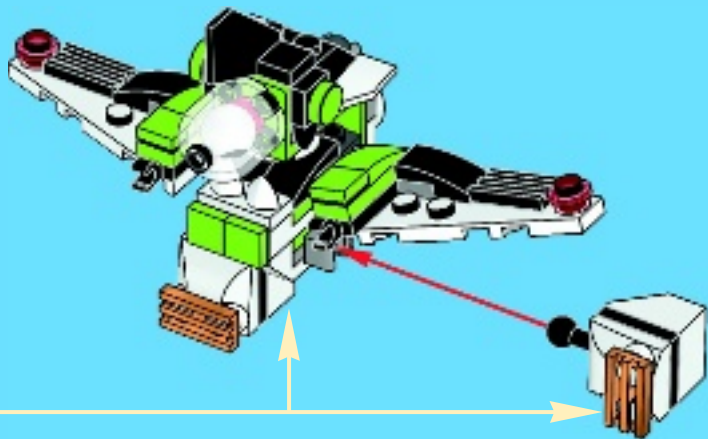

12

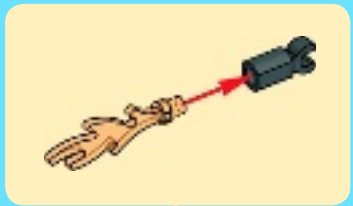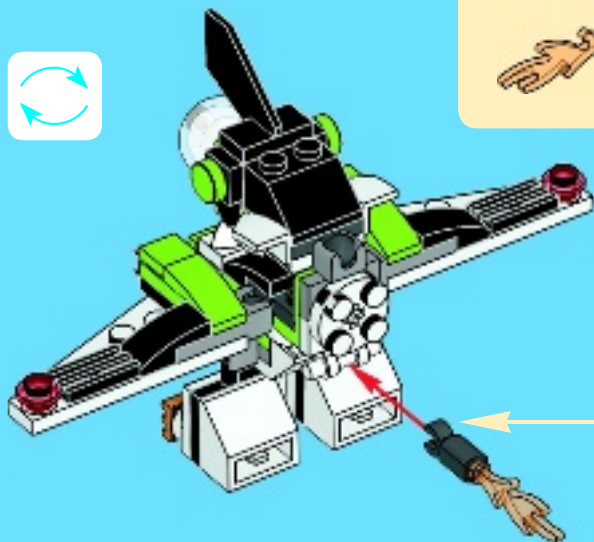  

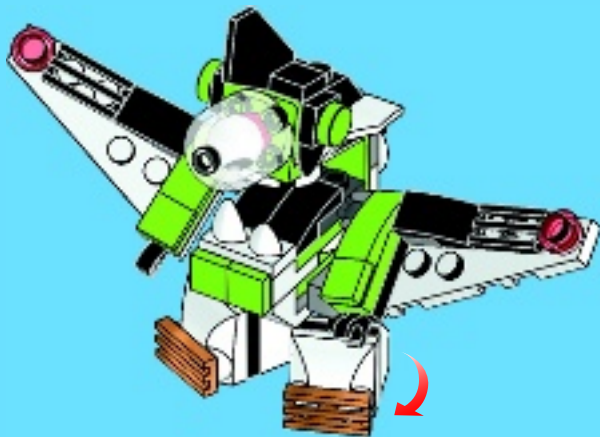 



1x
4287707



1x
4287708



2x
366001



1x
4173943



1x
4549393



2x
4494474



3x
403201



1x
4140583



1x
6046384



1x
6056225



1x
6046979



2x
4558954



2x
4273590



2x
241226



2x
4535739



4x
6047276



2x
6051038



1x
303926



1x
4529173



2x
4490599



2x
3005741



2x
6057878



2x
6069006



4x
4537251



2x
4164037



3x
4537937



2x
6094031



1x
4261397



3x
6043656



2x
6043639



3x
6039479



1x
6015890



1x
4113949



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :

1-800-422-5346 :





LEGO.com/mixels





Mixels



LEGO.com/mixels





Mixels

CN
CARTOON NETWORK