

6354

LEGOLAND®

 
LEGO



120064



1

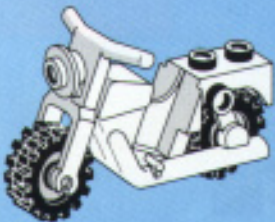

2



3



 
1




2




3

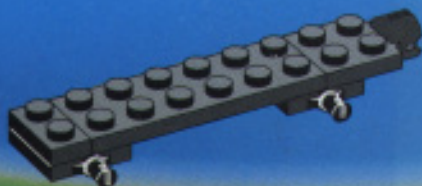


4

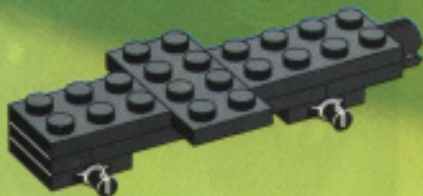 


5

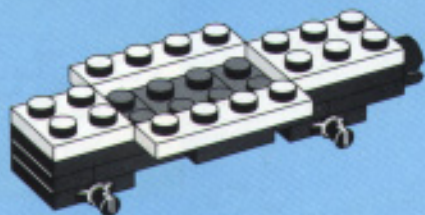 


6

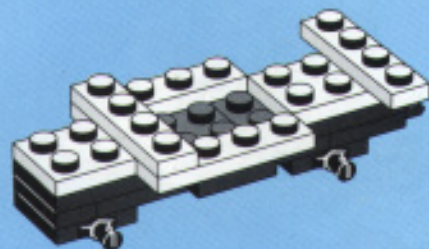 


7

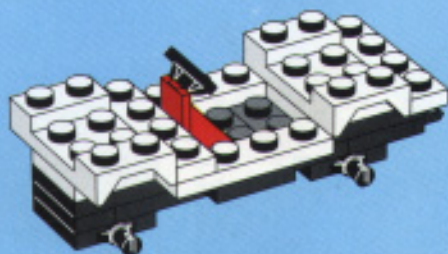 



8

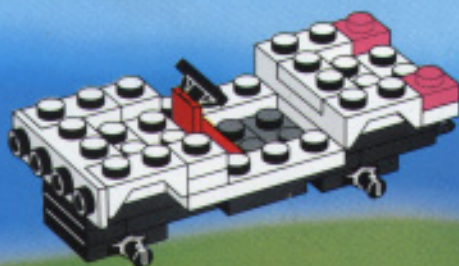 


9

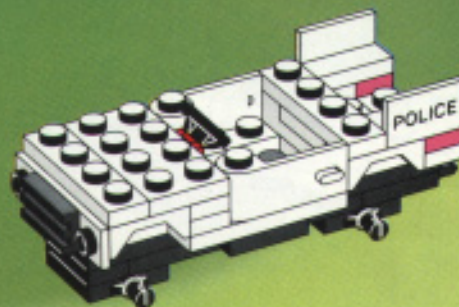 


10

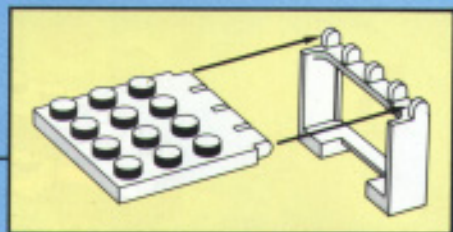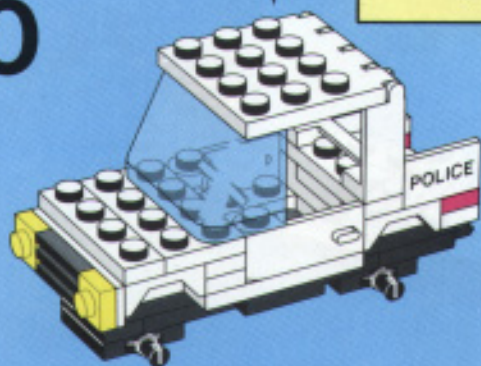  


11

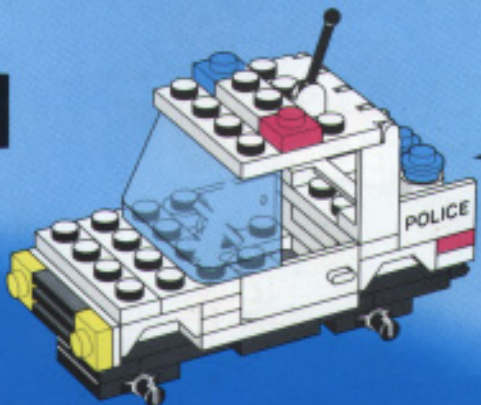 


12

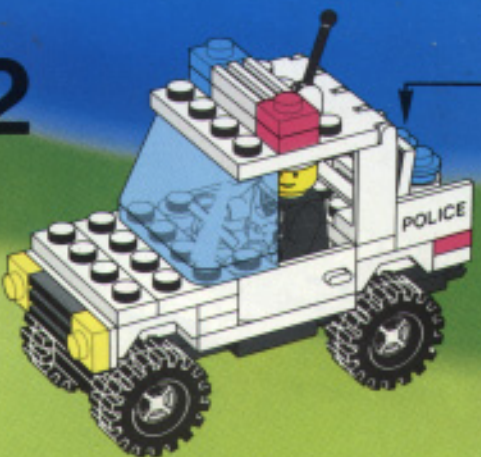 


1

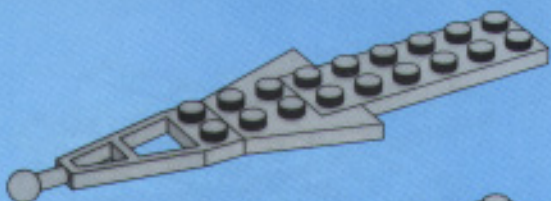 

2

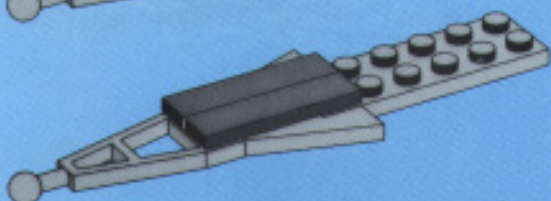 


3

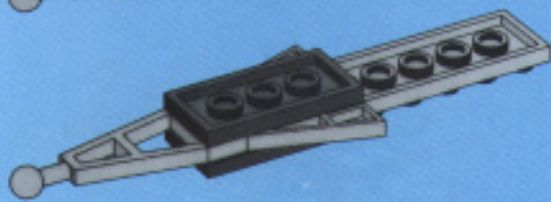 


4



 5

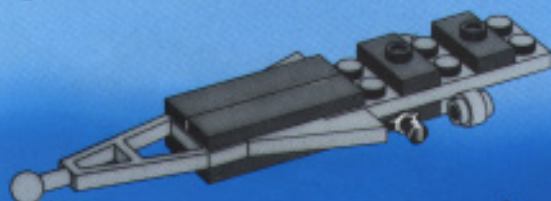


6

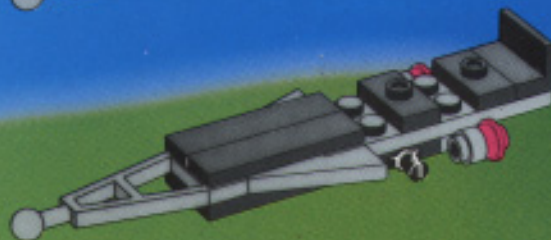 


7



 
1

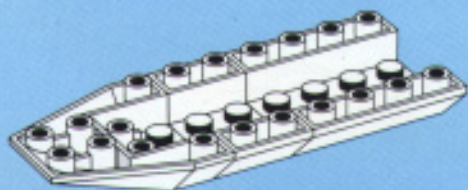


2

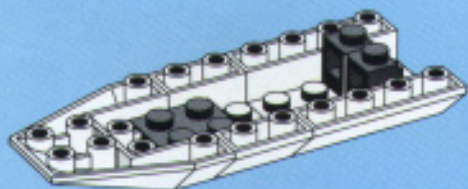 


3

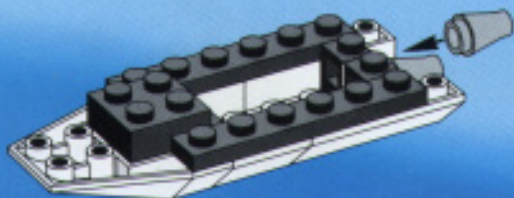 



4





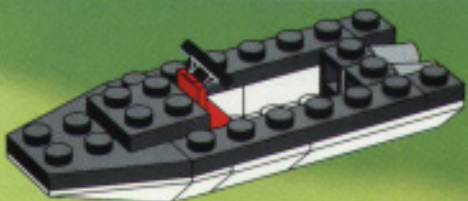 


5

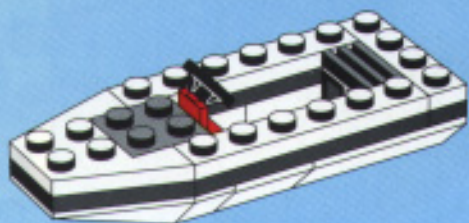 



6

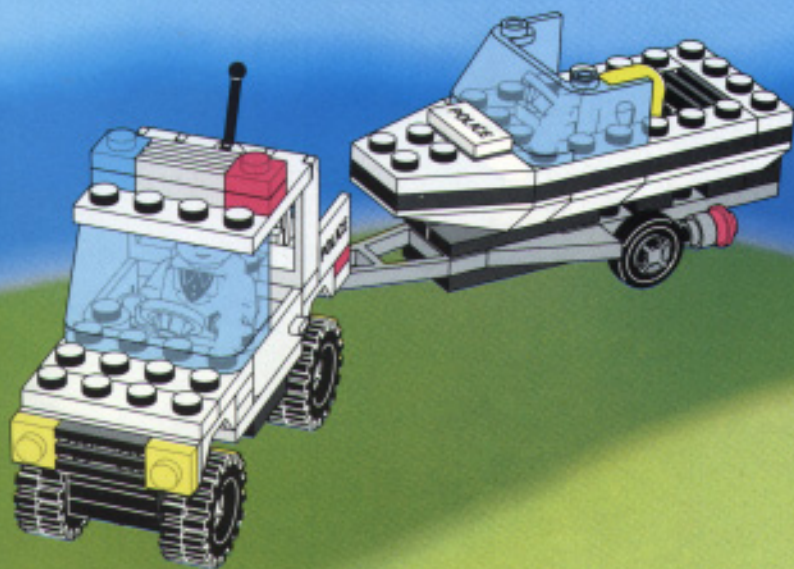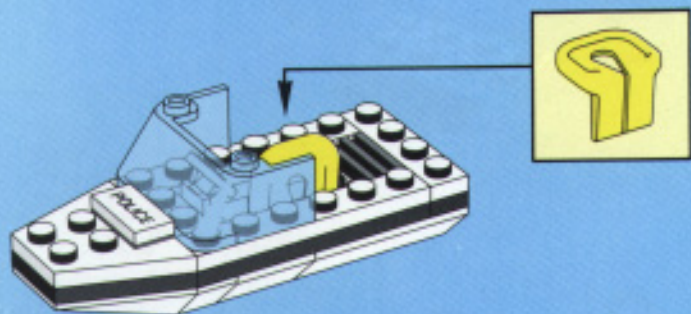  

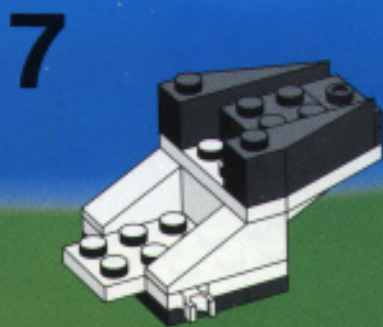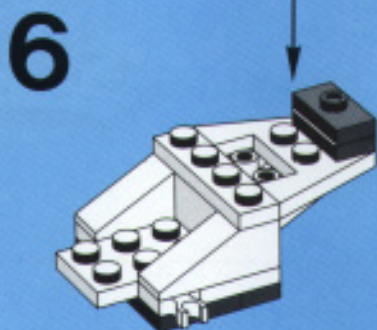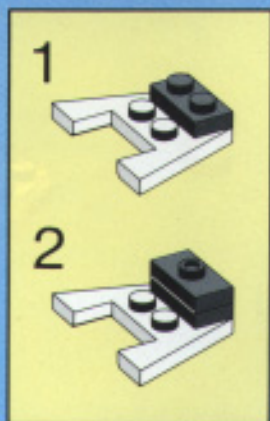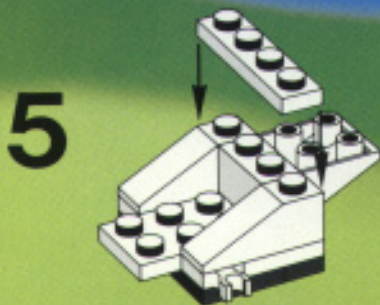    
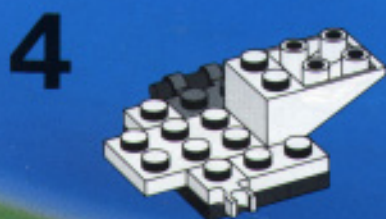 





8

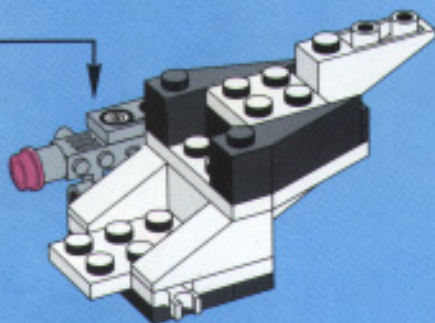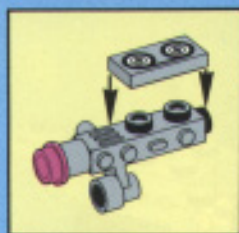  


1

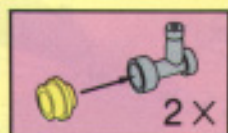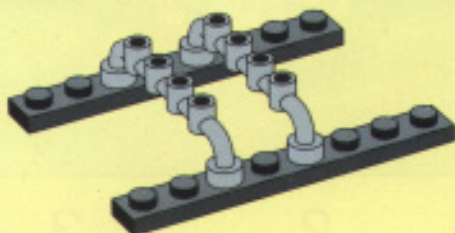  




2

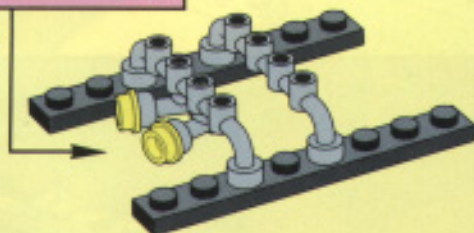 


9

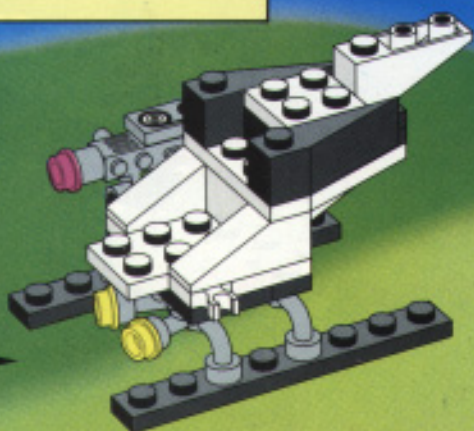 



# 10

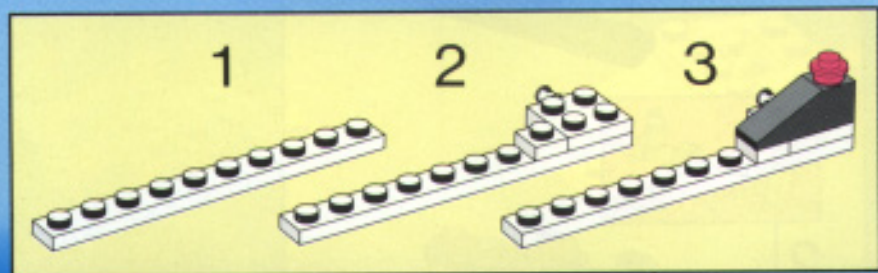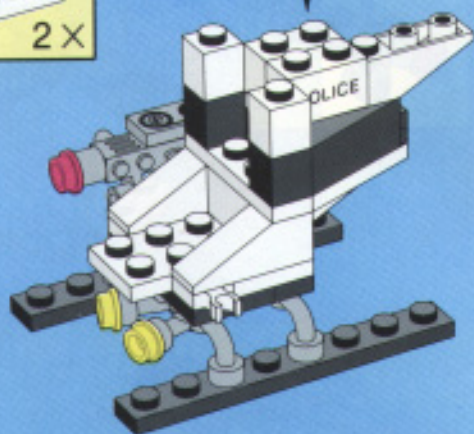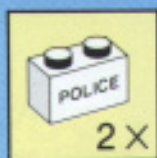   


# 11

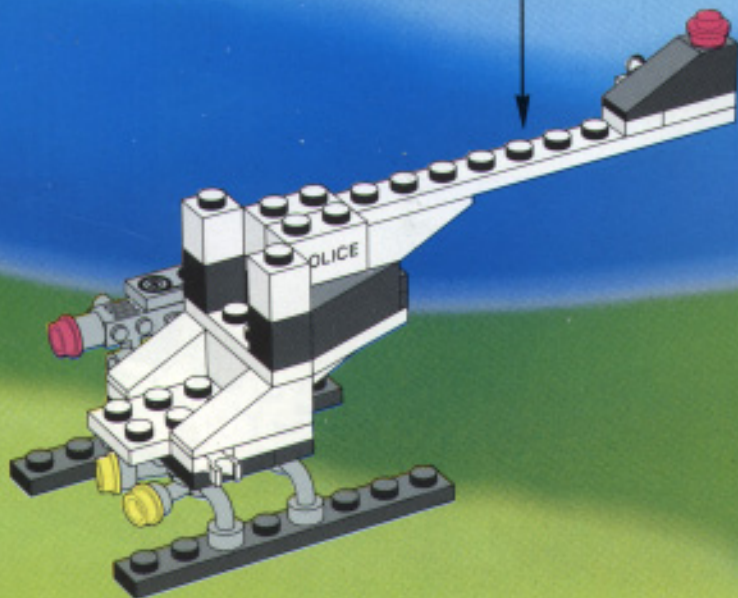 


12

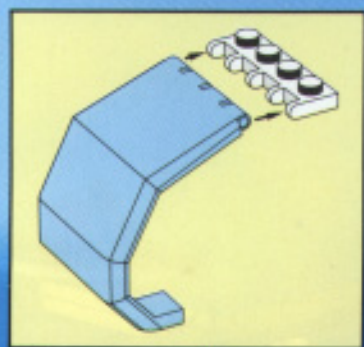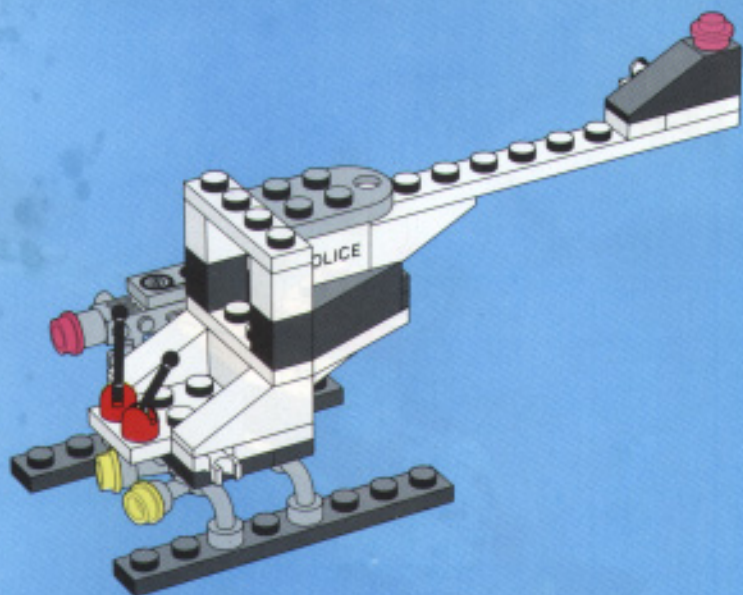  

13

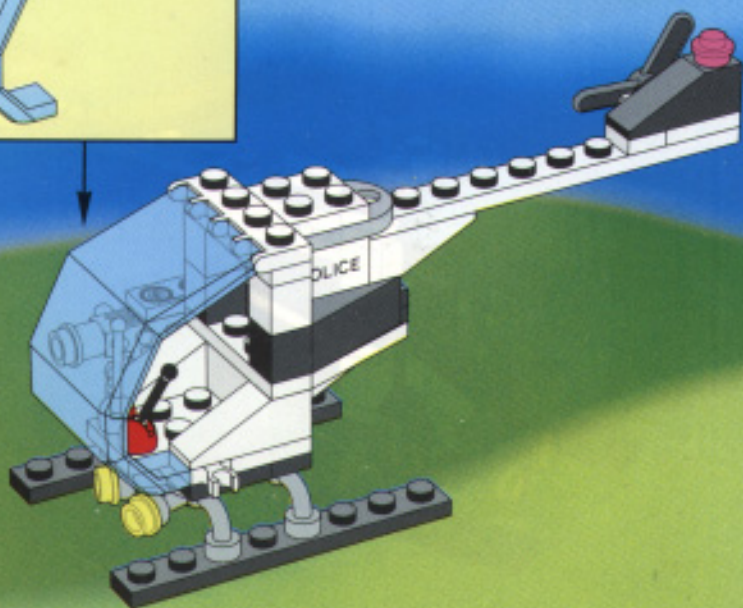 

# 14

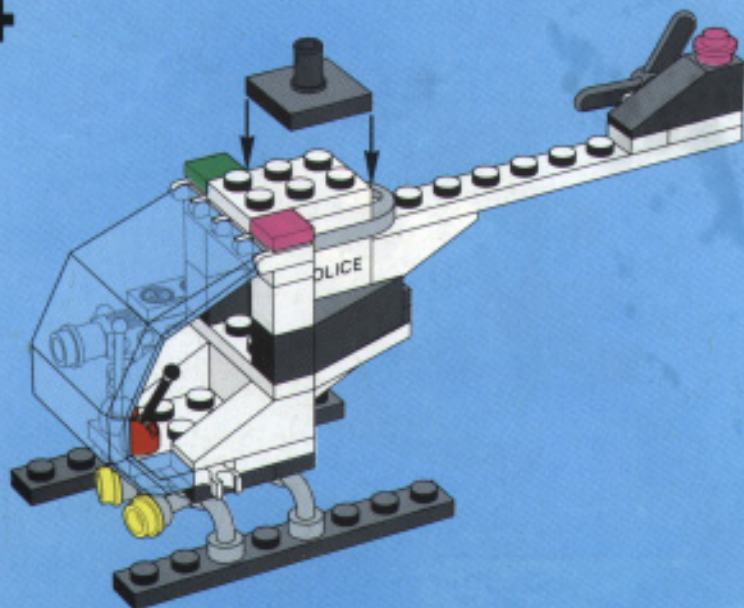 

# 15

