



40144

EXCLUSIVE
only at
ToysRus



1



2



3



4





 
1x

1




2x

2



1x

 3





4x

4



4



1x



1x

 
5





1x

1




1x



2x

 2



1x



1x

3





 
4x

4



1x

5

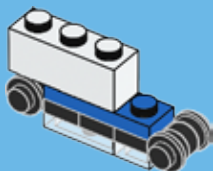

6



1x



1x



 
1x




1x

6

1



2

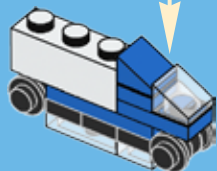 




1x


7




 8

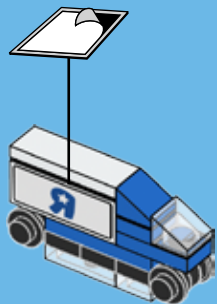


9

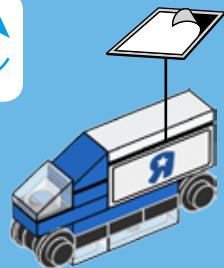 

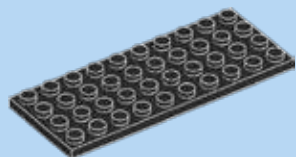 

1x

 
1

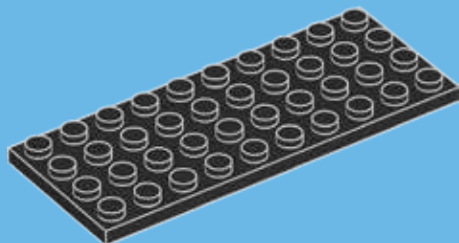



4x

 2

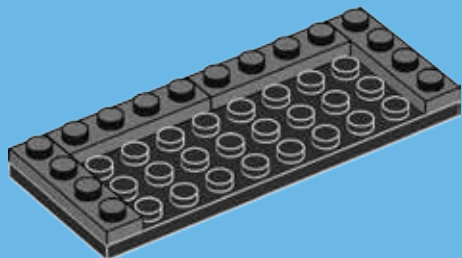



1x



3x

  
3

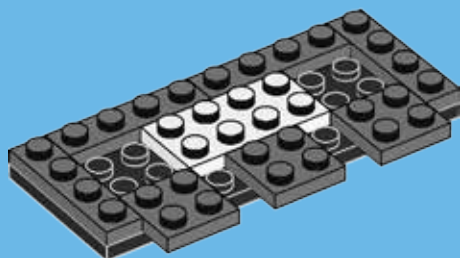

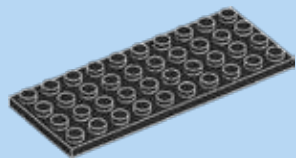

1x

 4

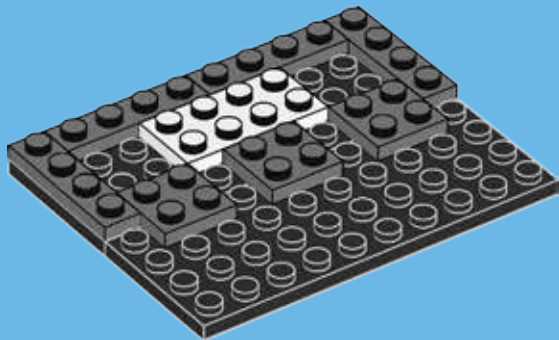




1x



2x

 5

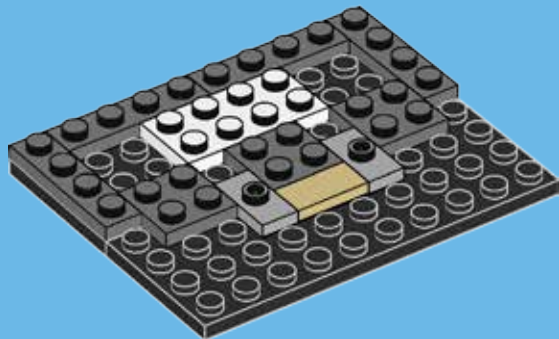


3x



5x

 6

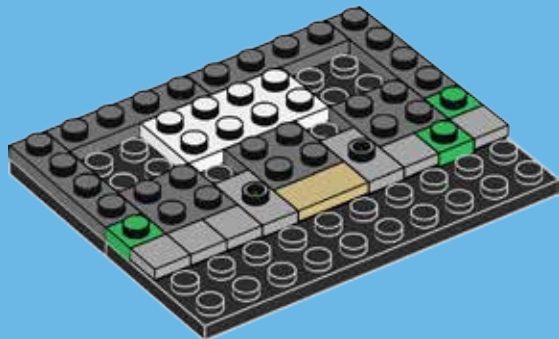



2x



2x

 


2x



2x

7

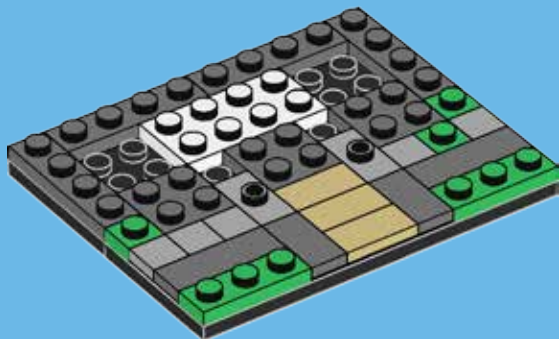



1x

 


3x



2x

8

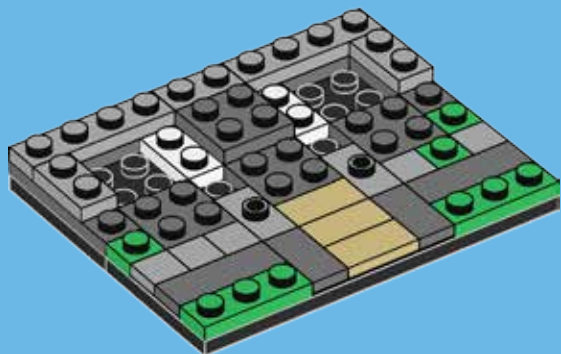


2x



2x

 9

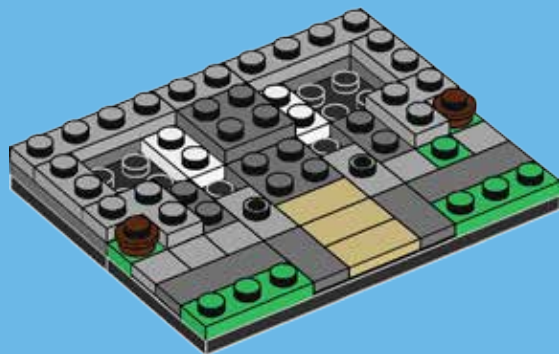



2x



2x

 


2x



1x

10

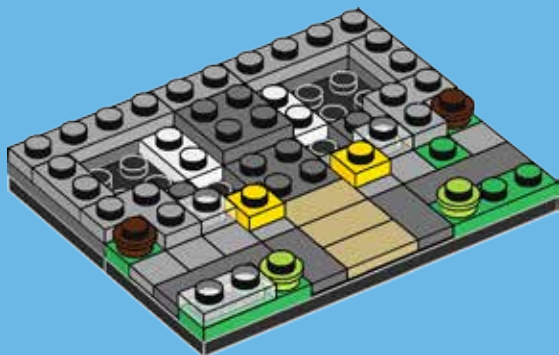



3x

 


6x



3x

11

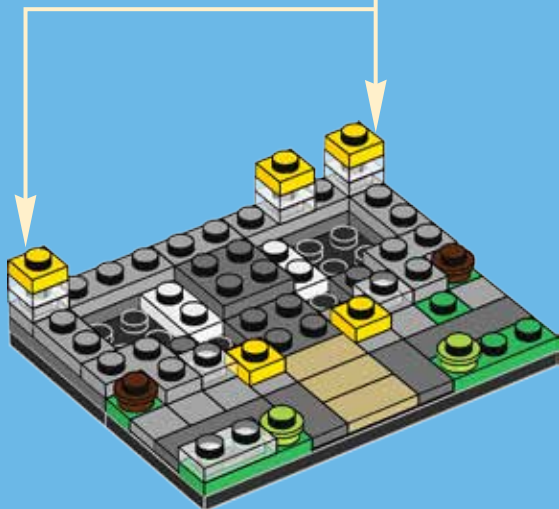

1x

 


1x



1x

12

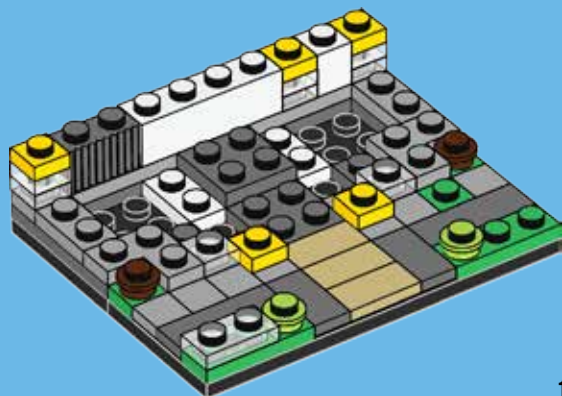




1x



1x

 13

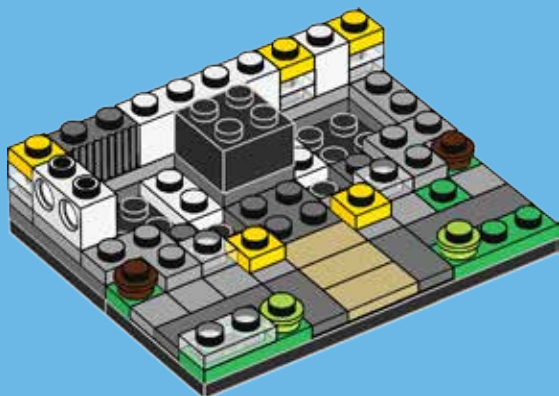





1x




2x

  14

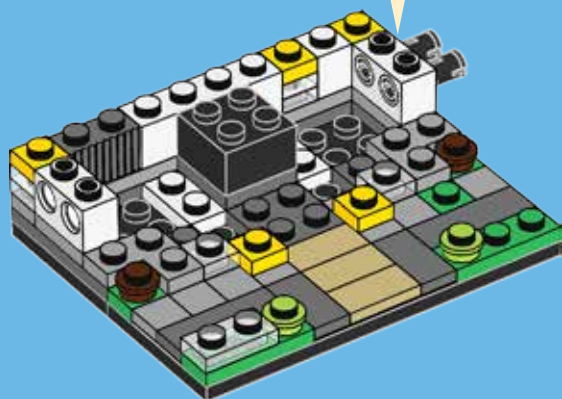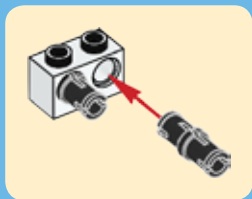

2x

 15

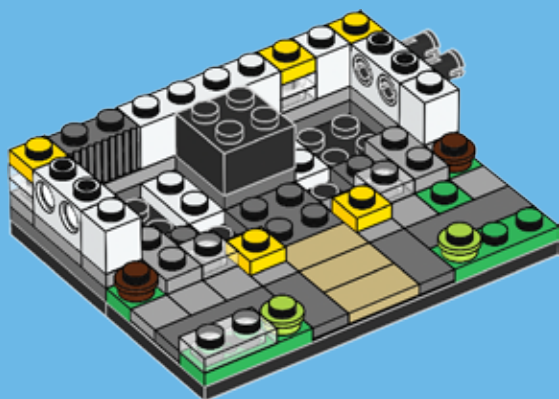



2x



1x



 
1x

16



1



2



3

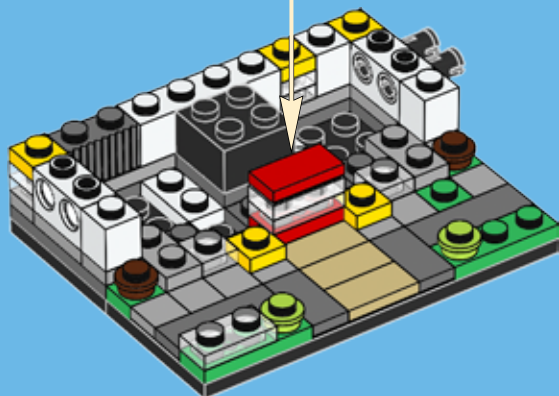  




2x



2x

 17

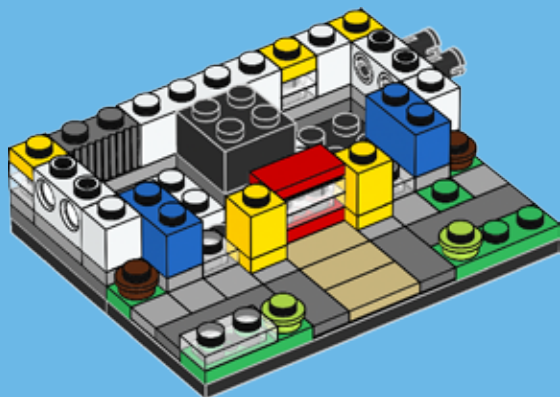




6x

18



 2x

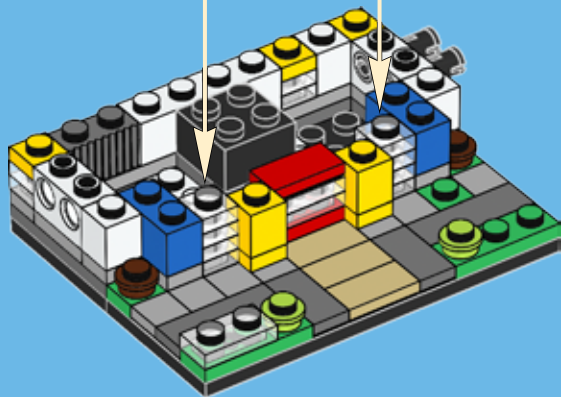



2x

 


2x



2x

19

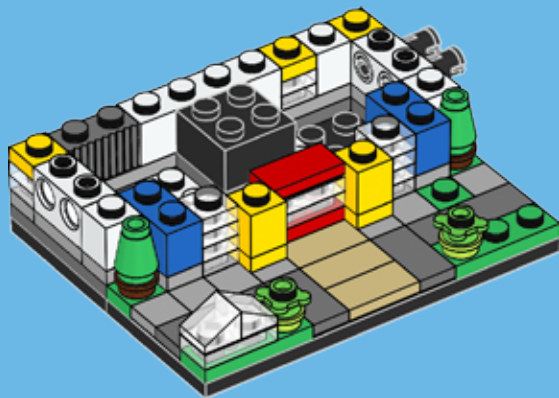




2x



1x

 20

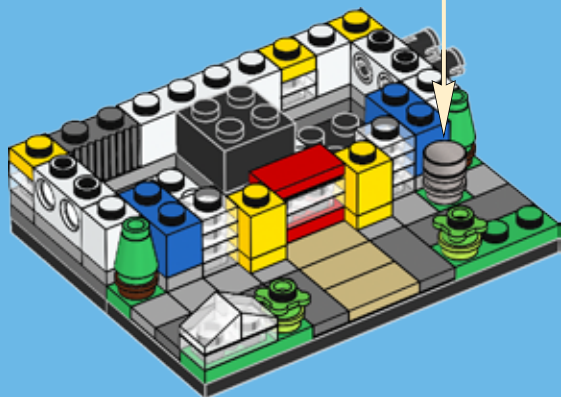




2x



1x

 21

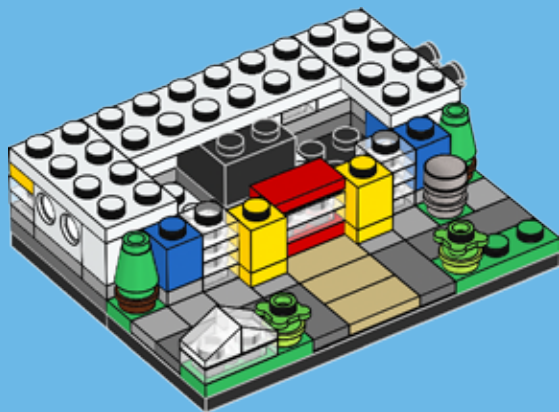




1x



2x

 22

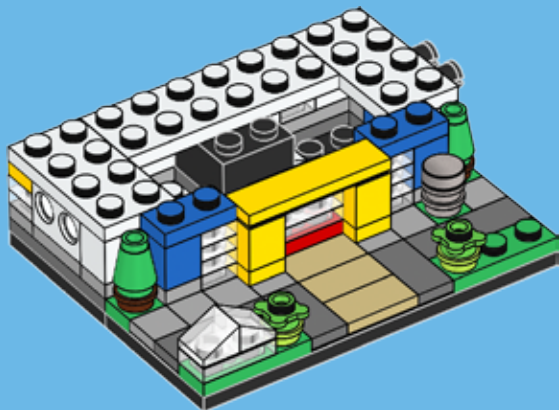




3x



2x

 23

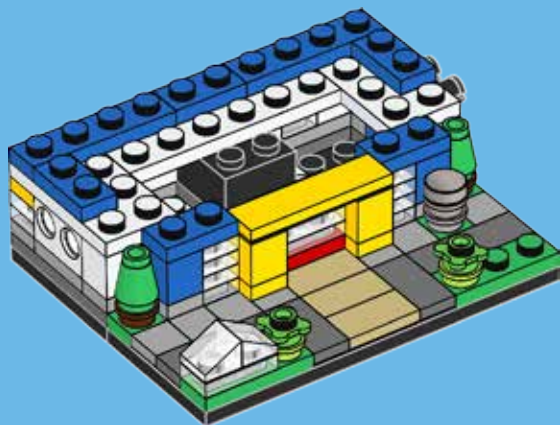




2x



1x

 
24

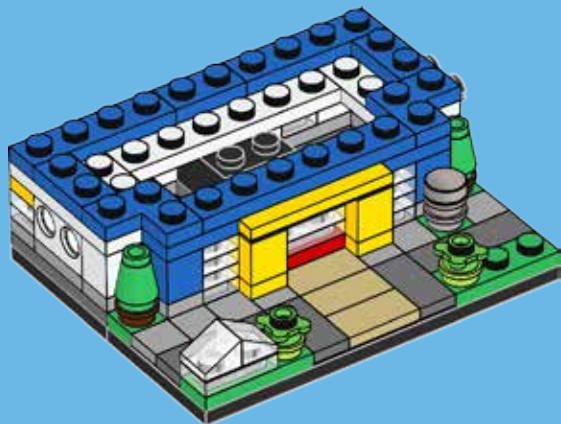



4x

 
25

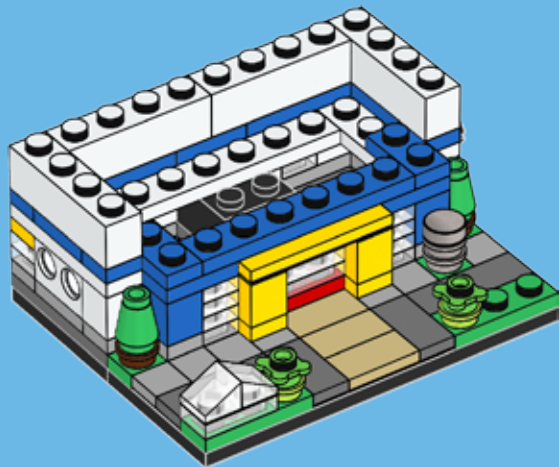



2x

 26

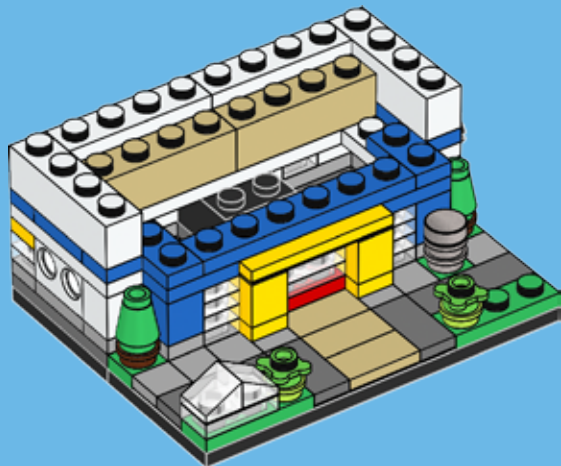




2x




1x

 27



2x

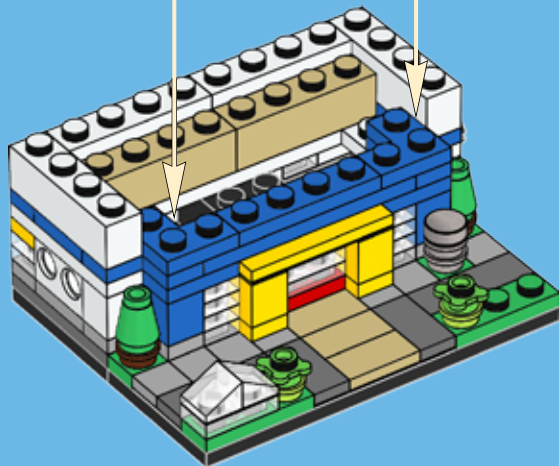 




2x



3x

 28

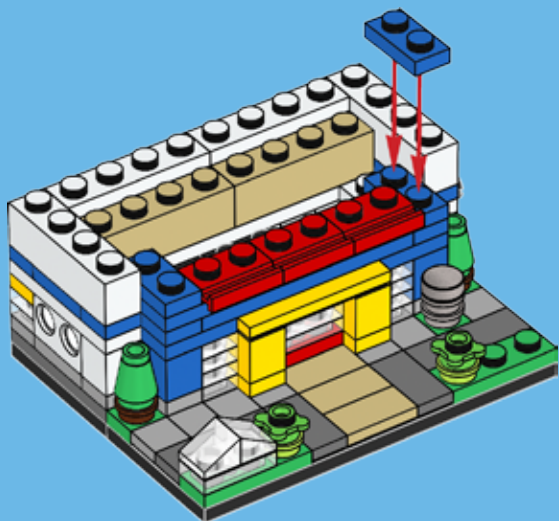



1x



2x



2x

29



 


1x



4x

30

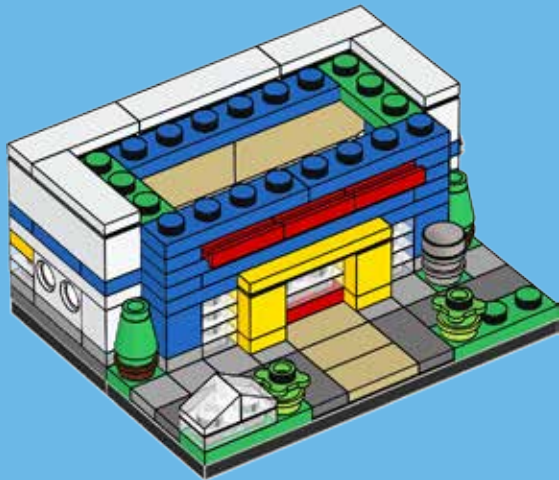





2x



2x

  31

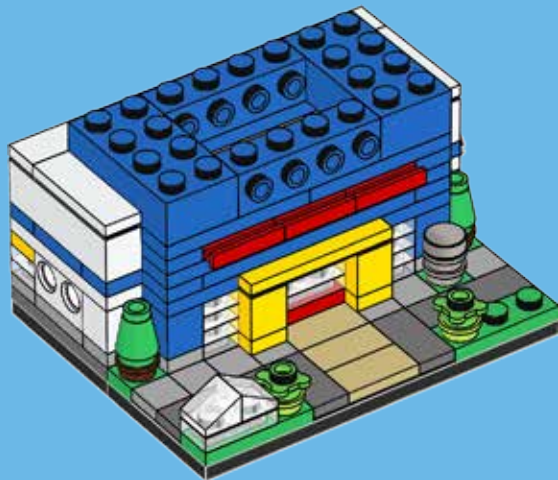



4x

32



34



1x

33

1



2





1x



1x



1x

34

1



2







Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :

1-800-422-5346 :







40141



40142



40143



40144

