



Mixels

41574

 
COMPAX




LEGO.com

6163149


1

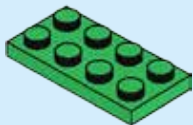


2

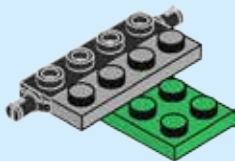 


3

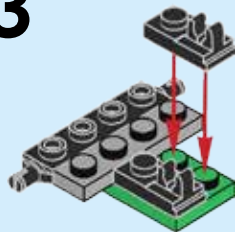 


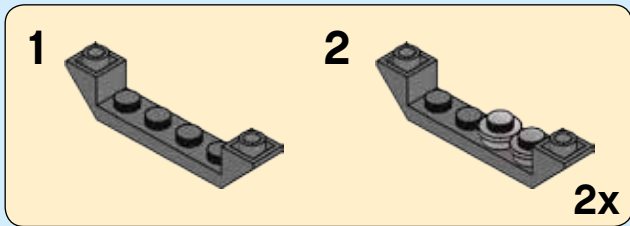 


4

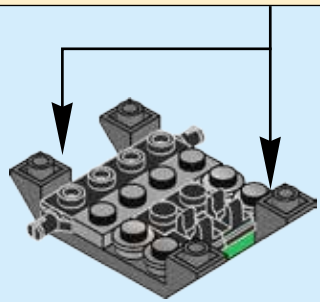 


5

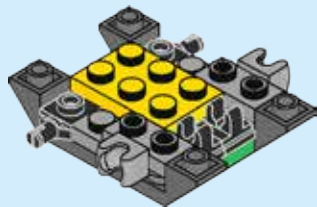 


6

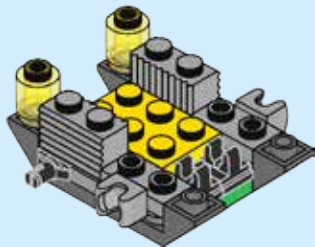 


7

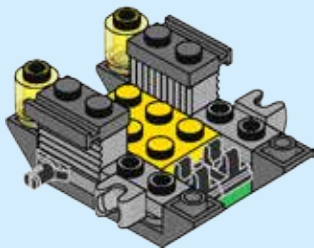 


8

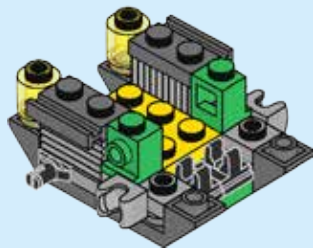 

9

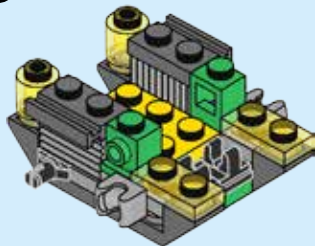 

10

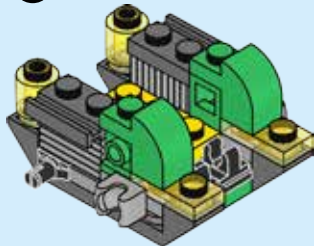 




11



 
12




13




 14

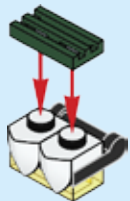


15

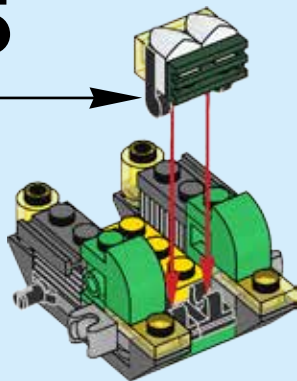 


 


16

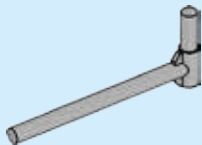 


17

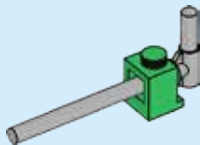 


18

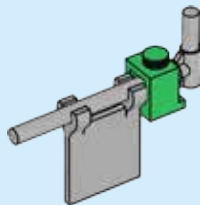 


19

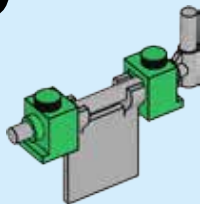 


20

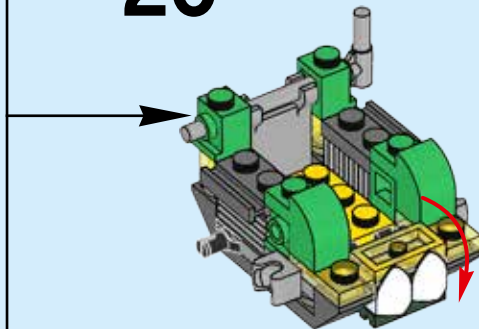 


21

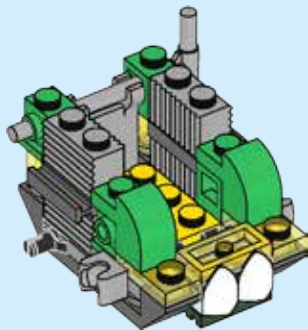 


22

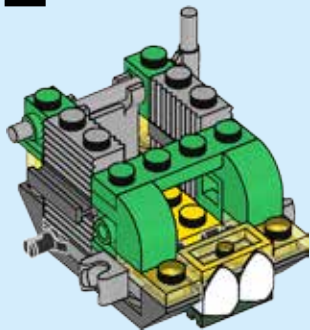 


23

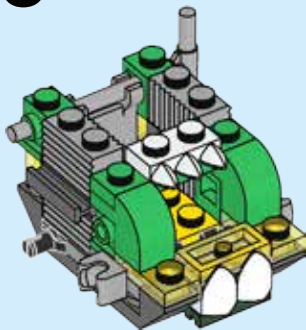 


24

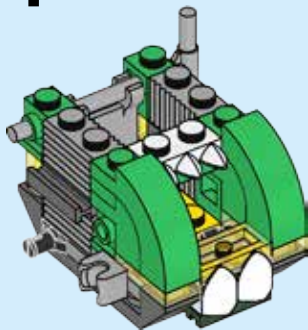 


25

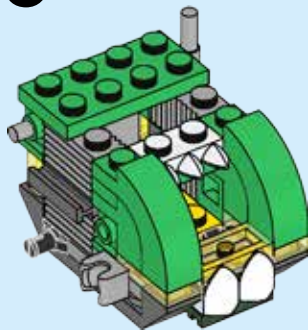 


26

 

27

 


28

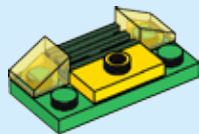 

29




 30

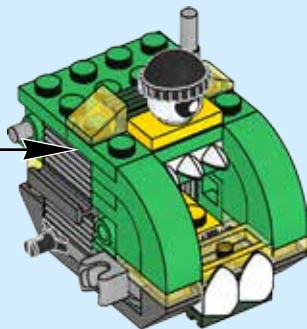





31

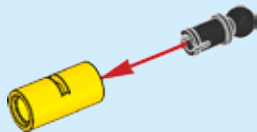 


32

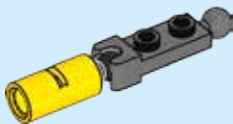 


33

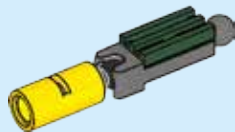 

34

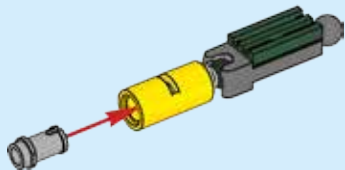 


35


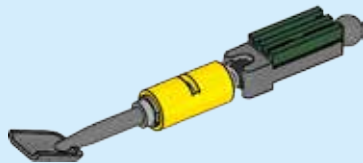 


2x

 36

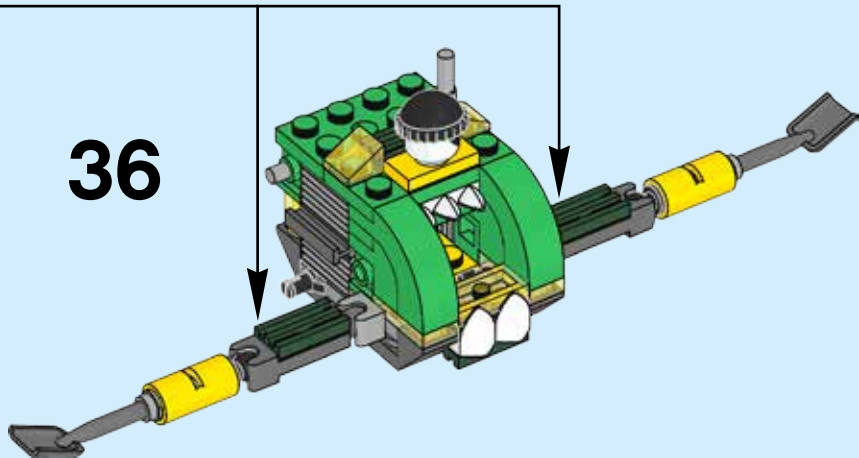

37

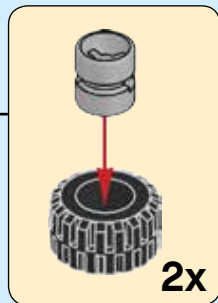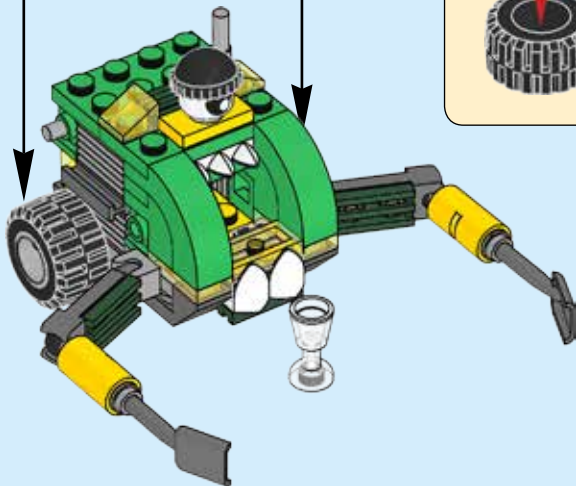  



1x
6092583



1x
6060802



1x
4157108



2x
4568644



1x
371028



2x
4211764



1x
3000240



2x
4526983



2x
6046905



2x
4184169



1x
292626



3x
302028



4x
4211383



2x
4543086



1x
302124



1x
6046381



2x
4598528



4x
4187334



2x
3006844



2x
6043656



2x
6039482



4x
4633691



1x
4225201



2x
6100223



2x
4260942



1x
6011817



2x
4211006



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :



1-800-422-5346 :



2x
4644085



3x
4194746



 
4x
6146505



2x
4211483



1x
4211445



1x
4565433



2x
4294180



**GOBBOL
41572**



 
 
 
**SWEEPZ
41573**



**COMPAX
41574**



**TRASHOZ
MAX!**

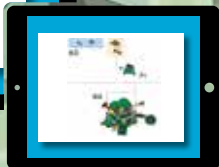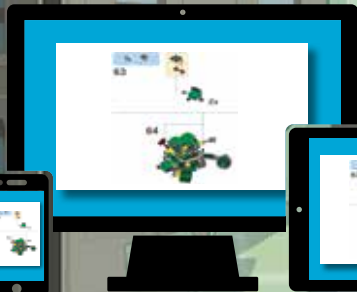

LEGO.com/mixels





Mixels

SERIES
9



COBRAX
41575



MYKE
41580



CAMSTA
41579



MYSTO
41577



SWEEPZ
41573



SCREENO
41578



SPINZA
41576



COMPAX
41574



GOBBOL
41572





LEGO.com/mixels